


## Elite/Ballistic Rear Seat Covers

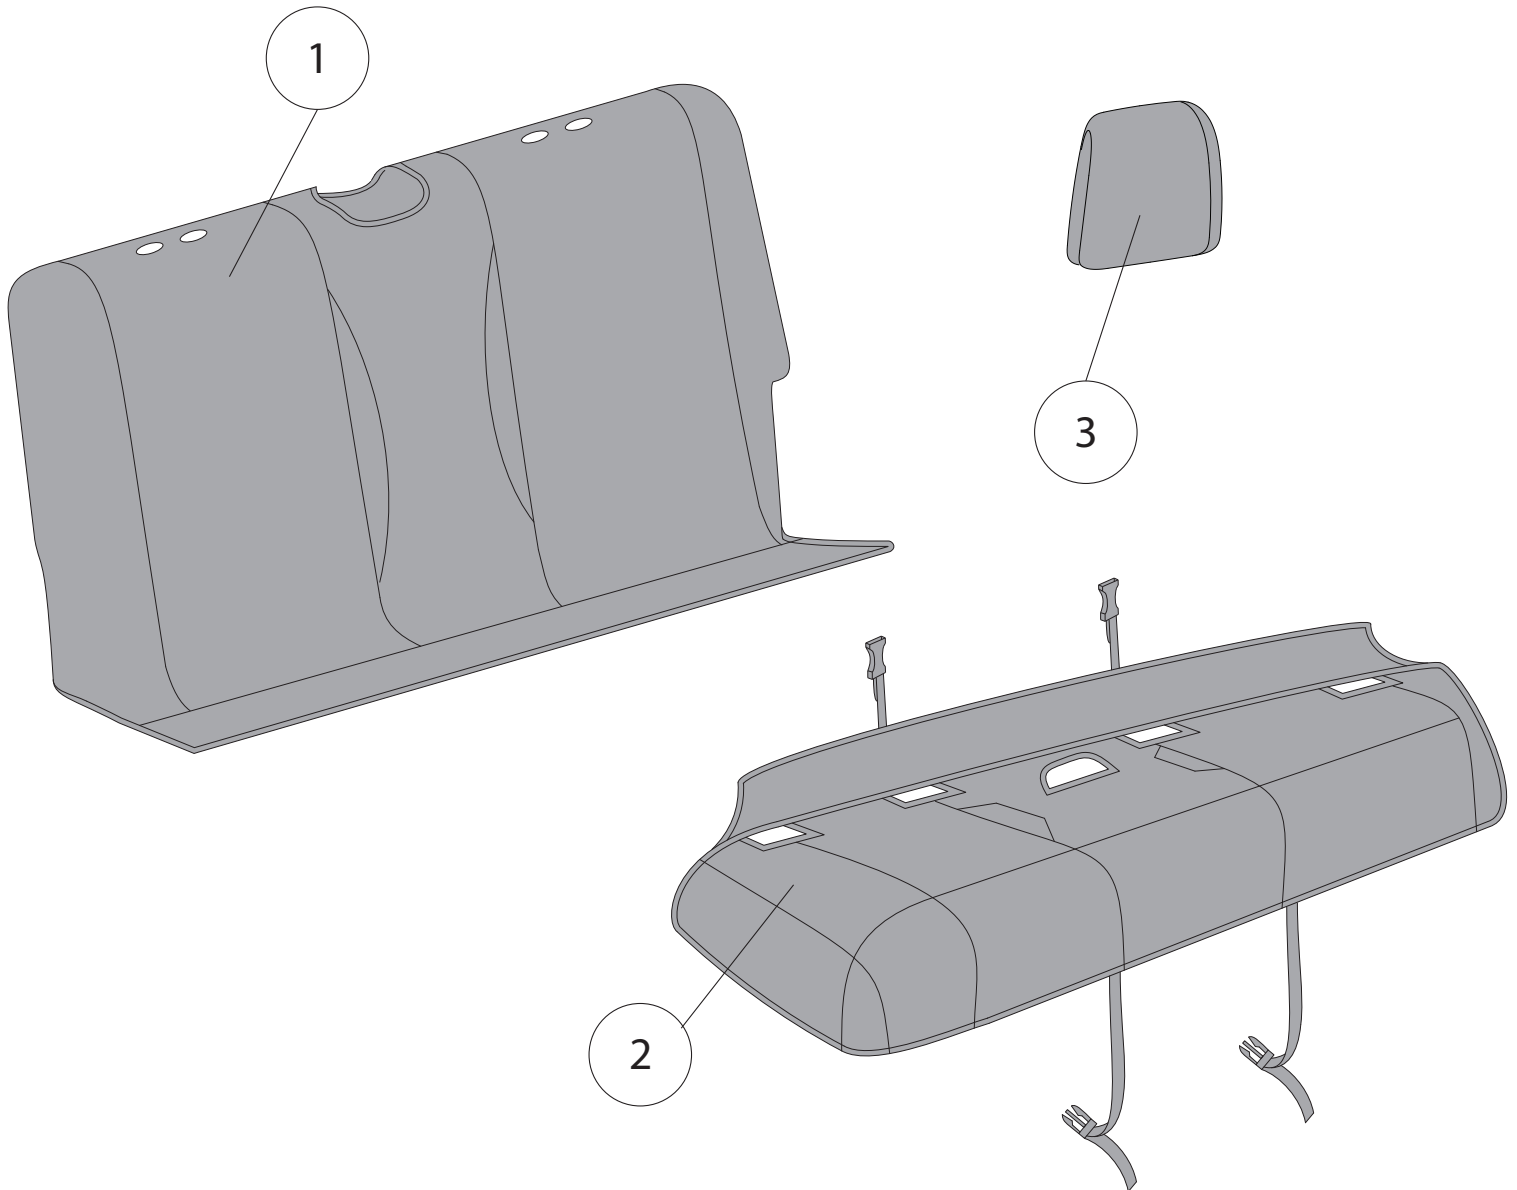

### Components

- |                              |     |
|------------------------------|-----|
| 1. Ballistic Rear Back Cover | (1) |
| 2. Ballistic Rear Seat Cover | (1) |
| 3. Ballistic Head Rest Cover | (2) |

#### OMIX-ADA® TECHNICAL SUPPORT

**PHONE:** M-F 8am - 5pm EST 1-800-449-6649 | **EMAIL:** techsupport@omix-ada.com

**FOR WARRANTY INFORMATION VISIT:** [www.Omix-Ada.com](http://www.Omix-Ada.com)




OMIX-ADA, Inc.




460 HORIZON DR. SUITE 100 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 770-614-6069 | info@omix-ada.com

## Elite/Ballistic Rear Seat Covers


1. Slide Rear Seat Cover over bottom portion of seat.
2. Push buckles through crease in bottom of seat as shown on right.

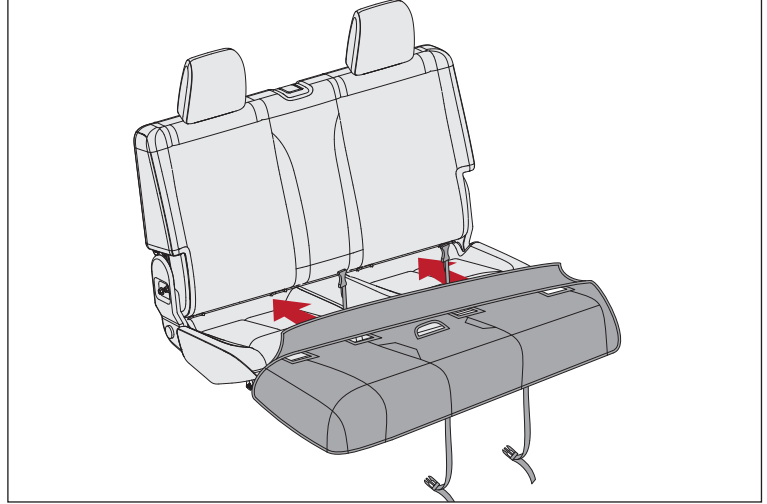

2. Secure front and rear buckles underneath seat as shown on right. Outer buckles will be inside front support bars.

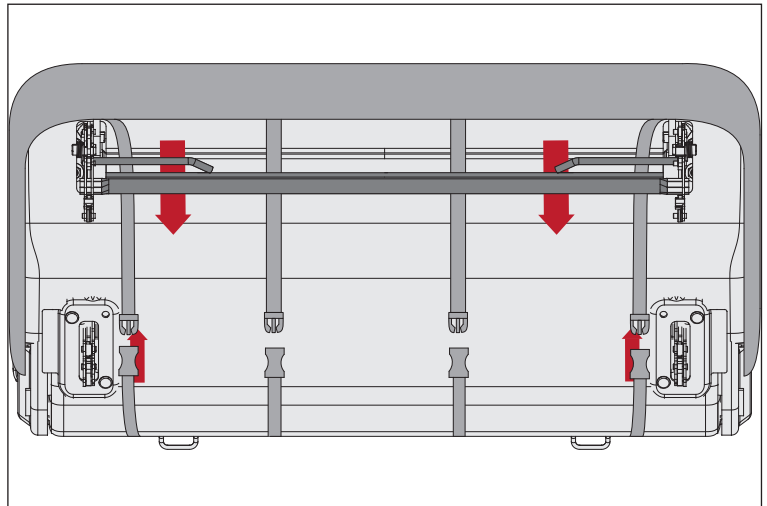

3. Secure side hooks to outer buckle straps.

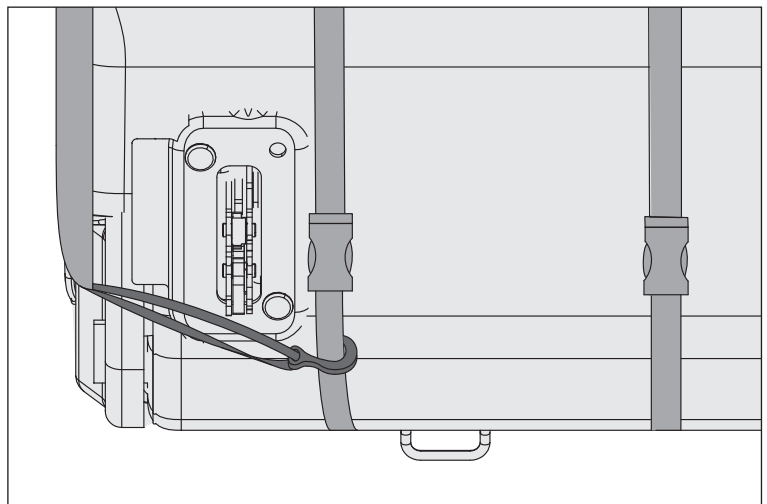




OMIX-ADA, Inc.




460 HORIZON DR. SUITE 100 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 770-614-6069 | info@omix-ada.com

## Elite/Ballistic Rear Seat Covers

4. Remove head rests from top of seat (a).
5. Slide Rear Back Cover over seats.
6. On rear of seats, pull middle strap through cut out in fabric (b).

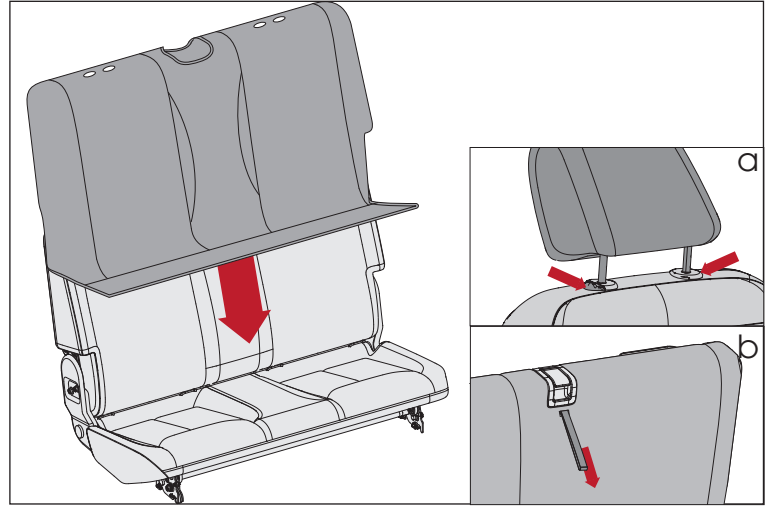

7. Press fabric down around head rest buttons until through cut outs in fabric.

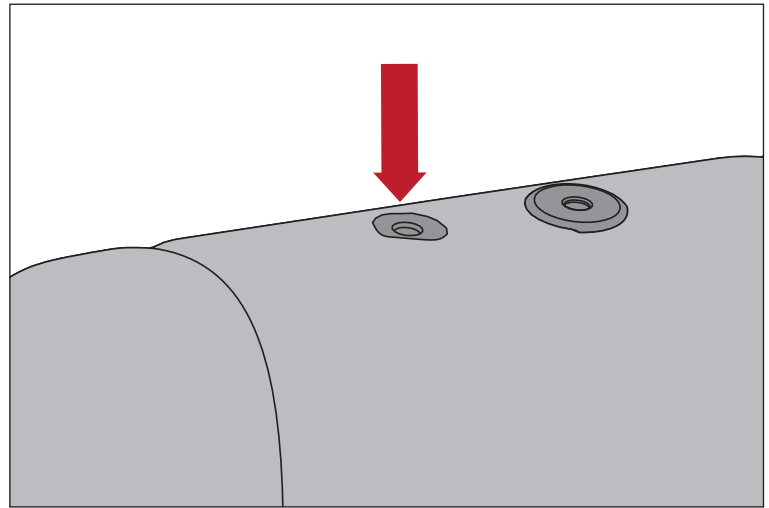

8. For 2007-2010 models, slide Head Rest Covers over head rests. For 2011-current models, slide Head Rest Covers over head rests and secure with hook and loop fabric.

9. Replace head rests on top of seats.

