

ADJUSTABLE TIRE DEFLATOR KIT, RUGGED RIDGE, UNIVERSAL APPLICATION

Please read and follow Setting instructions carefully.

Step 1. Deflate a (spare) tire to your preferred deflation pressure.

Step 2. With lock ring adjusting cap wound down, screw your tire deflator on the valve stem making sure its clean and threads are in good condition.

Step 3. Loosen cap (counterclockwise) until deflator pops open, then immediately tighten cap to the position where air stops exhausting.

Step 4. Turn lock ring up to adjust cap and tighten.

Your Tire Deflator is now set to your preferred deflation pressure. Adjustments to you deflators can be made at the rate of 3 psi per half turn of the adjusting cap. When the tire pressure and the deflator setting is within 8 psi, a manual start may be required by installing the deflator then lifting the center pin to start operation. Keep deflators clean and dry. Do not interchange components. Remove after deflation.

For Technical Assistance Contact:
OMIX-ADA Tech Support
Phone: 1-800-449-6649
Email: techsupport@omix-ada.com
Web: www.Omix-Ada.com