

BBK PERFORMANCE LLC
3060 Performance Circle
Deland, FL 32724

For any questions, email us:
TECH@BBKPERFORMANCE.COM



INSTALLATION INSTRUCTIONS - INS280

300 LPH DIRECT REPLACEMENT ELECTRIC FUEL PUMP KIT

Part # 1865, 1866 & 1867 // 2005 – 2010 Ford Mustang V6 and GT



No special Tools required: Hoist or end lift jack, OSHA approved safety stands, OSHA approved fuel transfer pump, OSHA approved fuel storage containers and a variety of mechanics hand tools.



Install Time: Approximately 3 hours.



Difficulty: Average.



Warning: This rotary fuel injection pump WILL NOT work on carbureted fuel systems. It is for electronic fuel injection only.



MADE IN U.S.A.

IMPORTANT: All appropriate safety equipment and gear must be used during the installation of this or any BBK Performance products or any time you work on a vehicle. BBK Performance accepts no responsibility for injuries or damage caused by or during the installation of this product.

UPDATED LAST: July 2019

BBK PERFORMANCE LLC
3060 Performance Circle
Deland, FL 32724

For any questions, email us:
TECH@BBKPERFORMANCE.COM



FOLLOW THESE INSTRUCTIONS CAREFULLY TO ENSURE CORRECT FITMENT AND OPERATION

PRECAUTIONS FOR FUEL SYSTEM SERVICE REDUCE THE RISK OF FIRE AND PERSONAL INJURY IT IS NECESSARY TO OBSERVE THE FOLLOWING PRECAUTIONS:

- Perform this repair ONLY in a properly equipped service facility.
- Position the vehicle in a clear, level, well ventilated area.
- Make sure there are no sources of spark or combustion near the work area.
- Perform work in a no-smoking area, or post no-smoking signs in the area selected.
- Have readily available a fully functional Class B fire extinguisher of adequate size (such as a 5 pound CO2 as a minimum.)
- Disconnect the ground cable from the vehicle's battery before performing any operation involving gasoline, gasoline tanks or gasoline lines.
- Allow the vehicle to cool before performing any operation which could possibly expose gasoline or gasoline vapors to hot parts such as catalytic converters, hot light bulbs, or similar components.
- Avoid using extension cords or lights that might overheat or cause sparks.
- Avoid inhaling gasoline fumes and prolonged skin contact with gasoline. Promptly wash any body areas which have been in contact with gasoline.
- Wear approved safety glasses any while performing repairs.
- When raising the vehicles to perform under-vehicle services, use proper hoisting or jacking equipment along with approved safety supports.

It is impossible to anticipate all possible risk and conditions under which repairs may be made to a fuel system. Therefore, in addition to the safety concerns listed, you are urged to carefully evaluate the hazards involved in such a service procedure and take whatever further precautions that may be necessary.

CAUTION: Read these instructions thoroughly from start to finish before attempting to replace the fuel pump.

 **MADE IN U.S.A.** 

IMPORTANT: All appropriate safety equipment and gear must be used during the installation of this or any BBK Performance products or any time you work on a vehicle. BBK Performance accepts no responsibility for injuries or damage caused by or during the installation of this product.

UPDATED LAST: July 2019



FOLLOW THESE INSTRUCTIONS CAREFULLY TO ENSURE CORRECT FITMENT AND OPERATION

The word "MODULE" used throughout this instruction means fuel pump, bracket and fuel level sender assembly (if so equipped).

PREPARATIONS

STEP 1

Relieve fuel system pressure. **NOTE:** The fuel system can retain gasoline under pressure for a considerable period of time. Opening a pressurized line could spray fuel creating a risk of fire and personal injury.

Locate the Power Distribution Block and remove the Fuel Pump Relay. Relay locations are described inside the cover of the Power Distribution Block. Remove the fuel cap from the tank to relieve any tank pressure. With the Fuel Pump Relay removed, crank the engine to bleed down fuel system pressure. The engine will start and stall several times. Continue to momentarily crank the engine several more times. Be sure to turn the ignition switch completely to the off position between cycles. Once the engine no longer tries to start, the fuel system pressure is relieved.

STEP 2

Disconnect the negative (-) cable from the battery and position it so it cannot accidentally make contact with the negative (-) battery post during the fuel pump replacement procedure. **NOTE:** Be sure an appropriate fire extinguisher is readily accessible before continuing with the service procedure.

STEP 3

Drain the fuel from the fuel tank by using an appropriate siphon or approved fuel transfer pump. Gasoline must be stored in OSHA approved safety containers.

FUEL TANK REMOVAL

STEP 4

Raise the vehicle on a hoist, or raise the vehicle with a jack and secure it on jack stands. **Note:** never get under a vehicle that is not supported Safely on jack stands. If using a hoist be sure the safety Locking mechanism is engaged when the vehicle is raised.

STEP 5

Remove the fuel filter and vent hoses from the fuel tank.

STEP 6

Remove the skid plate and any shields that may interfere with removal of the fuel tank (if so equipped).

STEP 7

Support the fuel tank and remove the tank retaining straps.

STEP 8

Lower the fuel tank enough to access the top of the fuel tank. Caution: be sure that the fuel system pressure has been relieved before disconnecting the fuel lines. Opening fuel lines under pressure may result in injury or death. Safety glasses must be worn when using compressed air. As flying dirt particles may cause eye injury.

[Continued next page](#)

 **MADE IN U.S.A.** 

IMPORTANT: All appropriate safety equipment and gear must be used during the installation of this or any BBK Performance products or any time you work on a vehicle. BBK Performance accepts no responsibility for injuries or damage caused by or during the installation of this product.

UPDATED LAST: July 2019



FOLLOW THESE INSTRUCTIONS CAREFULLY TO ENSURE CORRECT FITMENT AND OPERATION

STEP 8 (CONT.)

(See section "preparations" of these instructions for the procedure to relieve fuel system pressure). After relieving the system pressure, a small amount of fuel may be released when disconnecting the fuel lines.

In order to reduce the chance of personal injury, cover the fuel line fittings with a shop towel before disconnecting, to catch any fuel that may leak out. Be sure to place the towel in an approved container when disconnect is completed.

STEP 9

Use compressed air to blow out dirt from the quick connect fittings. Disconnect the fuel lines.

STEP 10

Remove any other lines and electrical connections from the tank.

STEP 11

Carefully lower the fuel tank out of the vehicle.

REMOVE FUEL MODULE FROM TANK

STEP 12

Thoroughly clean the top of the fuel tank to prevent any dirt from getting into the fuel tank when the module is removed.

STEP 13

Remove the module snap-ring from the tank using the appropriate special tool, or other appropriate methods.

STEP 14

Carefully remove the module from the fuel tank. It may spring up from its position. The module may be full of fuel. Carefully discard the fuel into an approved container.

WARNING! HAVE ABSORBENT SHOP TOWELS READILY AVAILABLE WHEN REMOVING THE MODULE. SOME FUEL WILL SPILL WHEN THE PUMP BRACKET IS REMOVED.

STEP 15

Check the inside of the fuel tank for foreign debris and clean out the tank if necessary.

INSTALLATION OF MODULE INTO FUEL TANK

STEP 16

Be sure the fuel tank is clean inside and carefully install the module assembly into the fuel tank.

STEP 17

Align tab on front of sender with slot on the top of the fuel tank.

 **MADE IN U.S.A.** 

IMPORTANT: All appropriate safety equipment and gear must be used during the installation of this or any BBK Performance products or any time you work on a vehicle. BBK Performance accepts no responsibility for injuries or damage caused by or during the installation of this product.

UPDATED LAST: July 2019



FOLLOW THESE INSTRUCTIONS CAREFULLY TO ENSURE CORRECT FITMENT AND OPERATION

STEP 18

Be sure the new tank seal is installed before placing the unit into the tank.

STEP 19

Slowly apply pressure to top of spring loaded module until the module is flush with the tank.

STEP 20

Install the module retainer ring using the appropriate special tool or other appropriate methods. Tighten to the manufacturers recommended specification.

WRAP UP

STEP 21

Using only equipment designed for use with gasoline, refuel the fuel tank with gasoline. NOTE: Be sure to clean up any fuel spills before proceeding.

STEP 22

Inspect the fuel system for leaks and correct them, if required.

STEP 23

With the ignition switch off, reconnect the negative (-) cable to the battery.

STEP 24

Re-install the fuel pump relay in the power distribution center.

STEP 25

Start the engine and inspect the fuel lines and connections for leaks. Correct any leaks as necessary.

STEP 26

Clear any trouble codes in the electronic control system that may exist as a result of the fuel pump replacement procedure. Use the specific vehicle service manual for assistance, if necessary.

TROUBLESHOOTING

SHOULD THE PUMP FAIL TO OPERATE:

Check the fuel pump fuse and fuel pump relay as outlined in the service manual. If the has power and proper polarity, check the remainder of the fuel pump system as outlined in the service manual. NOTE: This pump will not remedy malfunctions of the regulator, injectors or other fuel system components.

 **MADE IN U.S.A.** 

IMPORTANT: All appropriate safety equipment and gear must be used during the installation of this or any BBK Performance products or any time you work on a vehicle. BBK Performance accepts no responsibility for injuries or damage caused by or during the installation of this product.

UPDATED LAST: July 2019