



In order to work properly, the horn will need to be well grounded. For best results, scrape some of the paint off the horn bracket under the mounting bolt.

If the horn still does not work correctly after grounding, then the tension screw on the side may have moved during shipping. Adjust the screw until the horn has the correct tone, then secure the screw with Loctite glue.

