

NO PART OF THIS DOCUMENT MAY BE REPRODUCED WITHOUT PRIOR AGREEMENT AND WRITTEN PERMISSION OF
 FORD PERFORMANCE PARTS © Ford Motor Company 2020

PRIOR TO INSTALLATION READ THESE INSTRUCTION COMPETELY
For questions, Call the FORD PERFORMANCE Techline 1-800-367-3788

Please visit <https://www.performanceparts.ford.com> for warranty information


Contents/Bill of Materials:

Service Part Number	Description	Quantity
LC3Z-12029-A	Ignition coil	8
LC3Z-12286-A	Spark plug wire	8
W714507-S437	Coil bolts	16


Installation:

1. Install the ignition coils and the bolts. Note: right and left side are similar.

Torque: Stage 1: 62 lb*in (7 Nm)
 Stage 2: 45°

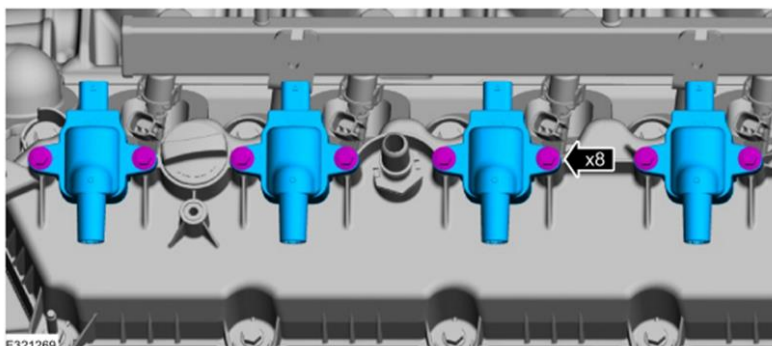

2. Apply a small amount of dielectric grease to each end of the spark plug wire.
3. Install the spark plug wires onto the spark plugs.
4. Connect the spark plug wires to the ignition coils.

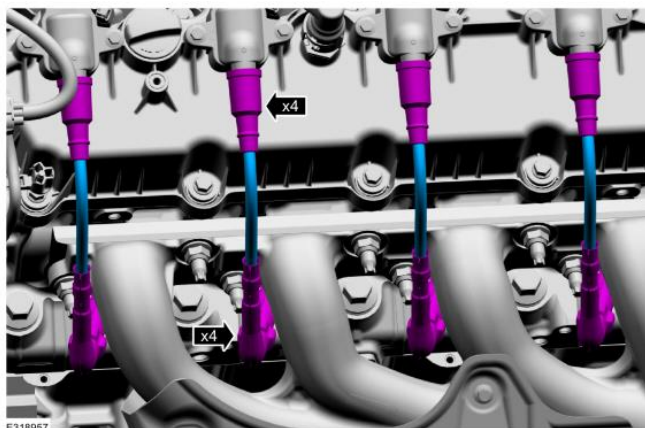

Additional Note: Spark plug torque is 133 lb*in (15 Nm)

Ford Factory Shop Manual purchase options www.motorcraftservice.com