



Polyurethane Axle Bumpstop

I N S T A L L A T I O N I N S T R U C T I O N S

Step 1 Start by placing the rear of the vehicle on jackstands – allowing the axle to hang freely.

! CAUTION !

Use extreme caution under vehicle

Step 2 Unbolt the factory snubber by removing the four bolts which attach it to the underside of the vehicle.

Step 3 After removing the snubber from the vehicle – the factory bumpstop bushing can be removed by unbolting it from the snubber bracket and replacing it with the new BBK unit.

