


INSTRUCTIONS

- 1) CUT OUT THE PROVIDED TEMPLATE.
- 2) TAPE THE TEMPLATE TO THE PASSENGER SIDE OF THE BUMPER COVER AND TRACE AREA TO BE CUT OUT ON BUMPER WITH A MARKER. FLIP OVER TEMPLATE AND REPEAT PROCEDURE FOR DRIVER'S SIDE.
- 3) CUT OUT OPENING WITH A MINIATURE SAW ZAW OR JIG SAW.
- 4) CLEAN AREA WHERE DOUBLE SIDED TAPE IS TO TOUCH THE BUMPER TO GET PROPER ADHESION.
- 5) ONCE THE COBRA GRILLE IS FITTING PROPERLY, DRILL A 1/8 INCH HOLE THROUGH THE PRE-DRILLED HOLES ON THE TOP OF THE COBRA GRILLE AND INTO THE BUMPER COVER.
- 6) INSTALL THE PROVIDED FLAT HEAD SCREWS.

Important: When printing, make sure "Page Scaling" is set to None!

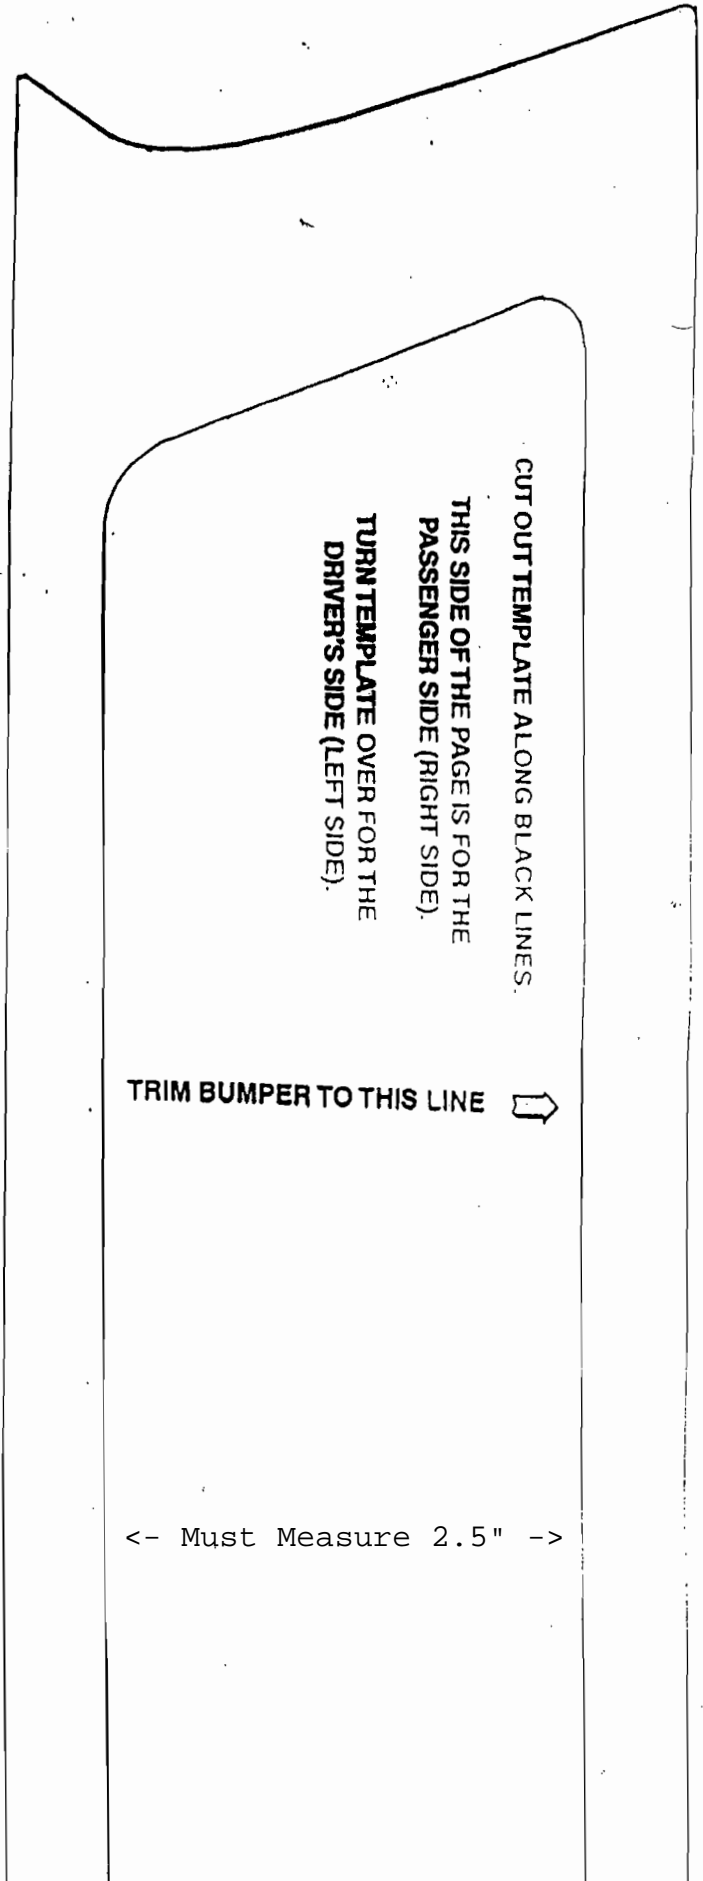

CUT OUT TEMPLATE ALONG BLACK LINES.

THIS SIDE OF THE PAGE IS FOR THE
PASSENGER SIDE (RIGHT SIDE).
TURN TEMPLATE OVER FOR THE
DRIVER'S SIDE (LEFT SIDE).

TRIM BUMPER TO THIS LINE 

<- Must Measure 2.5" ->