
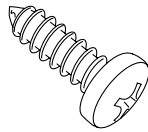


QUICK LATCH MOUNTING BRACKET INSTALLATION

Part # 74605-01A

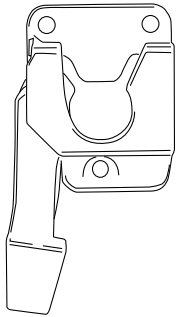

① x2

Quick Latch Mounting
bracket


② x6

Phillips head screw,
self tapping

Cut out supplied template and tape on the D-pillar as shown. Using a center punch, mark holes as specified by the template.




1

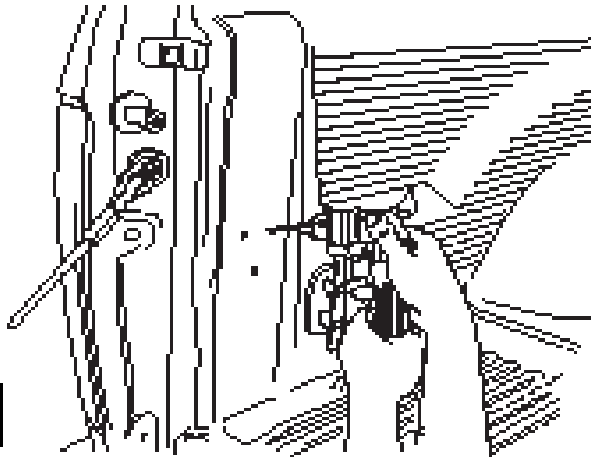

2

Using a power drill and 9/64" drill bit, drill through the sheet metal. If equipped with a bedliner, drill through bedliner.

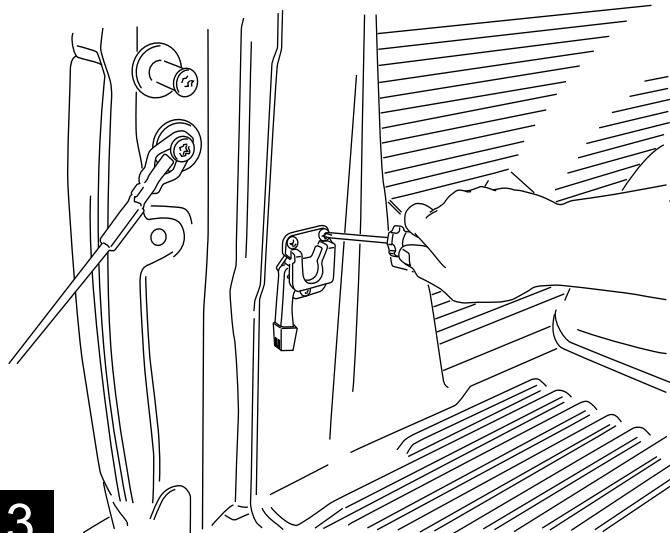

3

Fasten quick latch mounting brackets using the Phillips head screws and torque to 30 in. lbs. If equipped with bedliner, install quick latch mounting brackets over bedliner.

NOTE: If bedliner has contours that may prohibit a flat, solid mounting surface, cut out a rectangular section to clear the bracket and mount the bracket directly to the metal D-pillar.