

# **HUSKY LINERS®**

## **weatherBEATER**


### CARE AND USE INSTRUCTIONS

---


Thank you for selecting a WeatherBeater® Floor Liner from Winfield Consumer Products. Your new front floor liners are custom molded to fit your Ford F150 Super Cab truck. The liners are made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liners slick.

## INSTALLATION INSTRUCTIONS FOR YOUR FORD F150 SUPER CAB TRUCK FRONT FLOOR LINERS

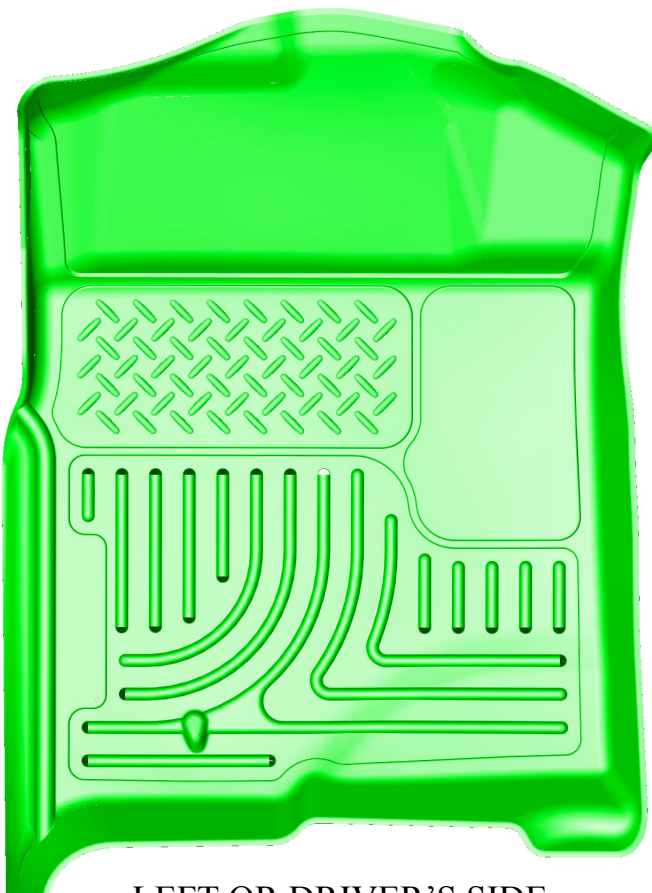

LEFT OR DRIVER'S SIDE

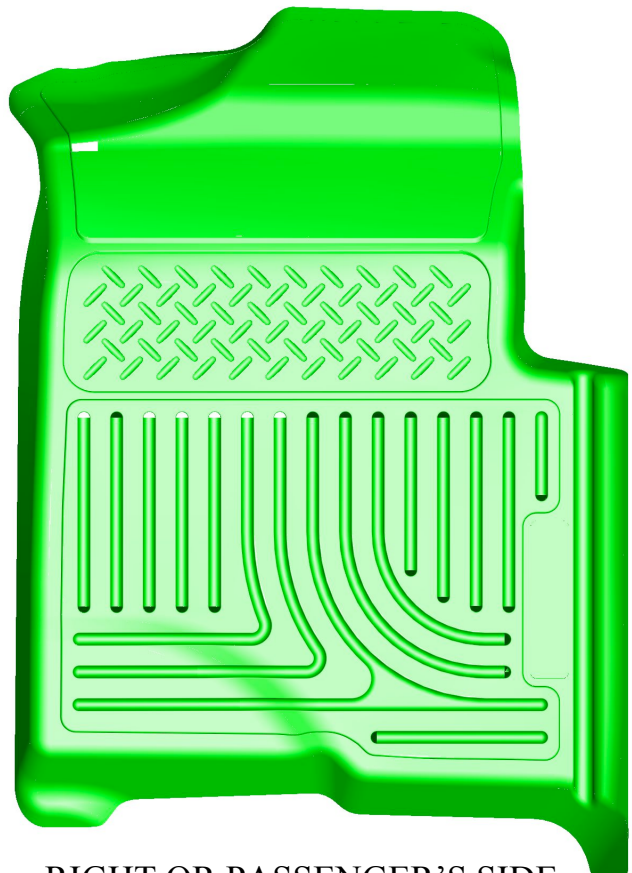

RIGHT OR PASSENGER'S SIDE

TO EASE INSTALLATION OF YOUR NEW FRONT LINERS, MOVE BOTH FRONT ROW SEATS ALL THE WAY BACK SO AS TO ALLOW THE MOST LEG ROOM. ONCE YOU HAVE INSTALLED YOUR LINERS, REPOSITION THE FRONT SEATS AS DESIRED.

# HUSKY LINERS®


## weatherBEATER

### CARE AND USE INSTRUCTIONS

Thank you for selecting a WeatherBeater® Floor Liner from Winfield Consumer Products. Your new rear floor liner is custom molded to fit your Ford F150 Super Cab truck. The liner is made to take the place of your factory floor mat. **For correct fit, it is necessary to remove the factory floor mat before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liners slick.

### INSTALLATION INSTRUCTIONS FOR YOUR FORD F150 SUPER CAB TRUCK SECOND SEAT FLOOR LINER

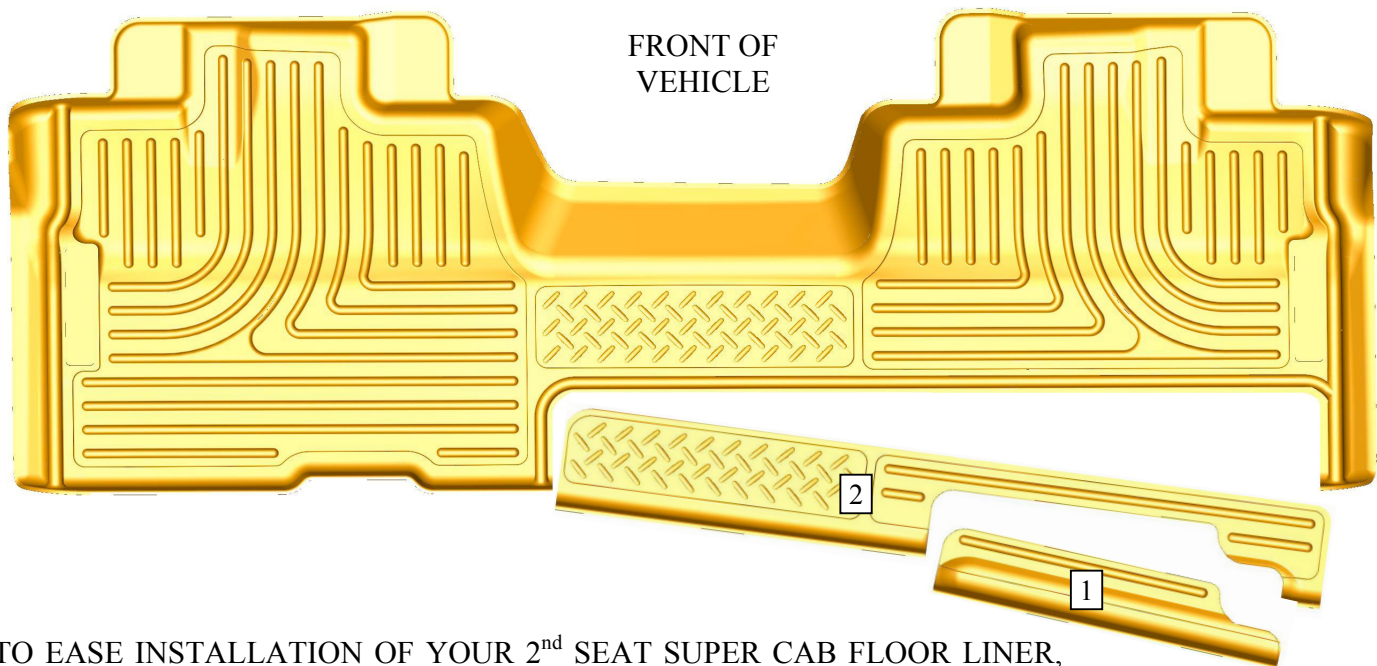

TO EASE INSTALLATION OF YOUR 2<sup>nd</sup> SEAT SUPER CAB FLOOR LINER, FIRST MOVE THE FRONT SEATS TO THEIR MOST FORWARD POSITIONS. WITH THIS DONE, INSERT LINER IN VEHICLE THEN REPOSITION THE FRONT SEATS AS DESIRED.

IF YOUR SUPER CAB HAS A FACTORY SUBWOOFER LOCATED UNDER THE REAR PASSENGER SEAT, YOU WILL NEED TO TRIM YOUR LINER TO ACCOMMODATE THIS OPTION. TO TRIM, USE THE MOLDED IN STEP IN YOUR LINER AS YOUR GUIDE AND REMOVE AREA DESIGNATED AS “1” ABOVE. A UTILITY KNIFE OR HEAVY SHEARS WORK WELL FOR TRIMMING..

IF YOU HAVE PURCHASED A HUSKY GEAR BOX TO USE IN CONJUNCTION WITH YOUR LINER, YOU WILL NEED TO TRIM YOUR LINER BY REMOVING AREA DESIGNATED AS “2” ABOVE. SIMPLY USE THE INNER EDGE OF RAISED RIB AS YOUR TRIM GUIDE.