


TCA048 INSTALLATION INSTRUCTIONS

TOOLS REQUIRED:

- Hydraulic jack and jack stands
- Wrenches – 15mm, 18mm, 19mm

INSTALLATION:

1. Lift the rear of the vehicle and safely support with jack stands under the cradle.
2. Using an 18mm wrench, remove the lower bolt on the vertical link as shown in **IMAGE 1**.
3. Remove the top bolt using a 15mm wrench. Remove vertical link.
4. Install the BMR vertical link using the factory hardware.
5. Torque the lower bolt to 129 ft/lbs and the upper bolt to 81 ft/lbs.
6. Re-install the wheel/tire and lower the vehicle.

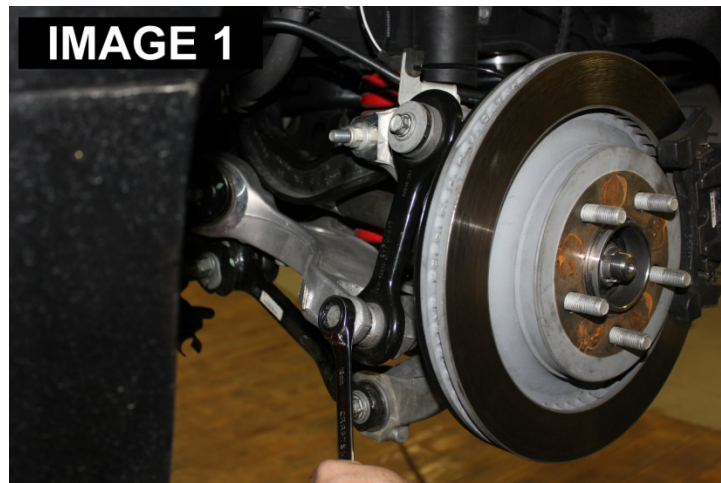

WWW.BMRSUSPENSION.COM

This product is an aftermarket accessory and not designed by the vehicles manufacturer for use on this vehicle. As such, Buyer assumes all risk of any damage caused to the vehicle or person during installation or use of this product.