

1965-1970 standard and staggered shock 304 SS after manifold exhaust


Part # 96Q000, 96Q004, 96Q005

Materials Included

- (1) H-pipe
- (2) Mufflers
- (2) after muffler tubes
- (2) polished straight tips or (2) turn down tips
- (6) 3/8 X 1 ½ Bolts
- (8) Lock washers 3/8
- (4) flat washers
- (8) 3/8 nuts
- (2) self-tapping screws
- (2) 3/8 X 3 inch bolts
- (2) 3 bolt 2 ½ id exhaust gasket
- (6) 2 ½ inch band clamp
- (4) exhaust hanger isolators


Warranty Information


IMPORTANT – The warranty on this product is VOID if the product is not properly installed, or has been modified or altered in any way. If you believe that modification will be required to fit an MRT Exhaust System on your vehicle, **please contact** MRT for assistance **BEFORE** making any modifications to the system.

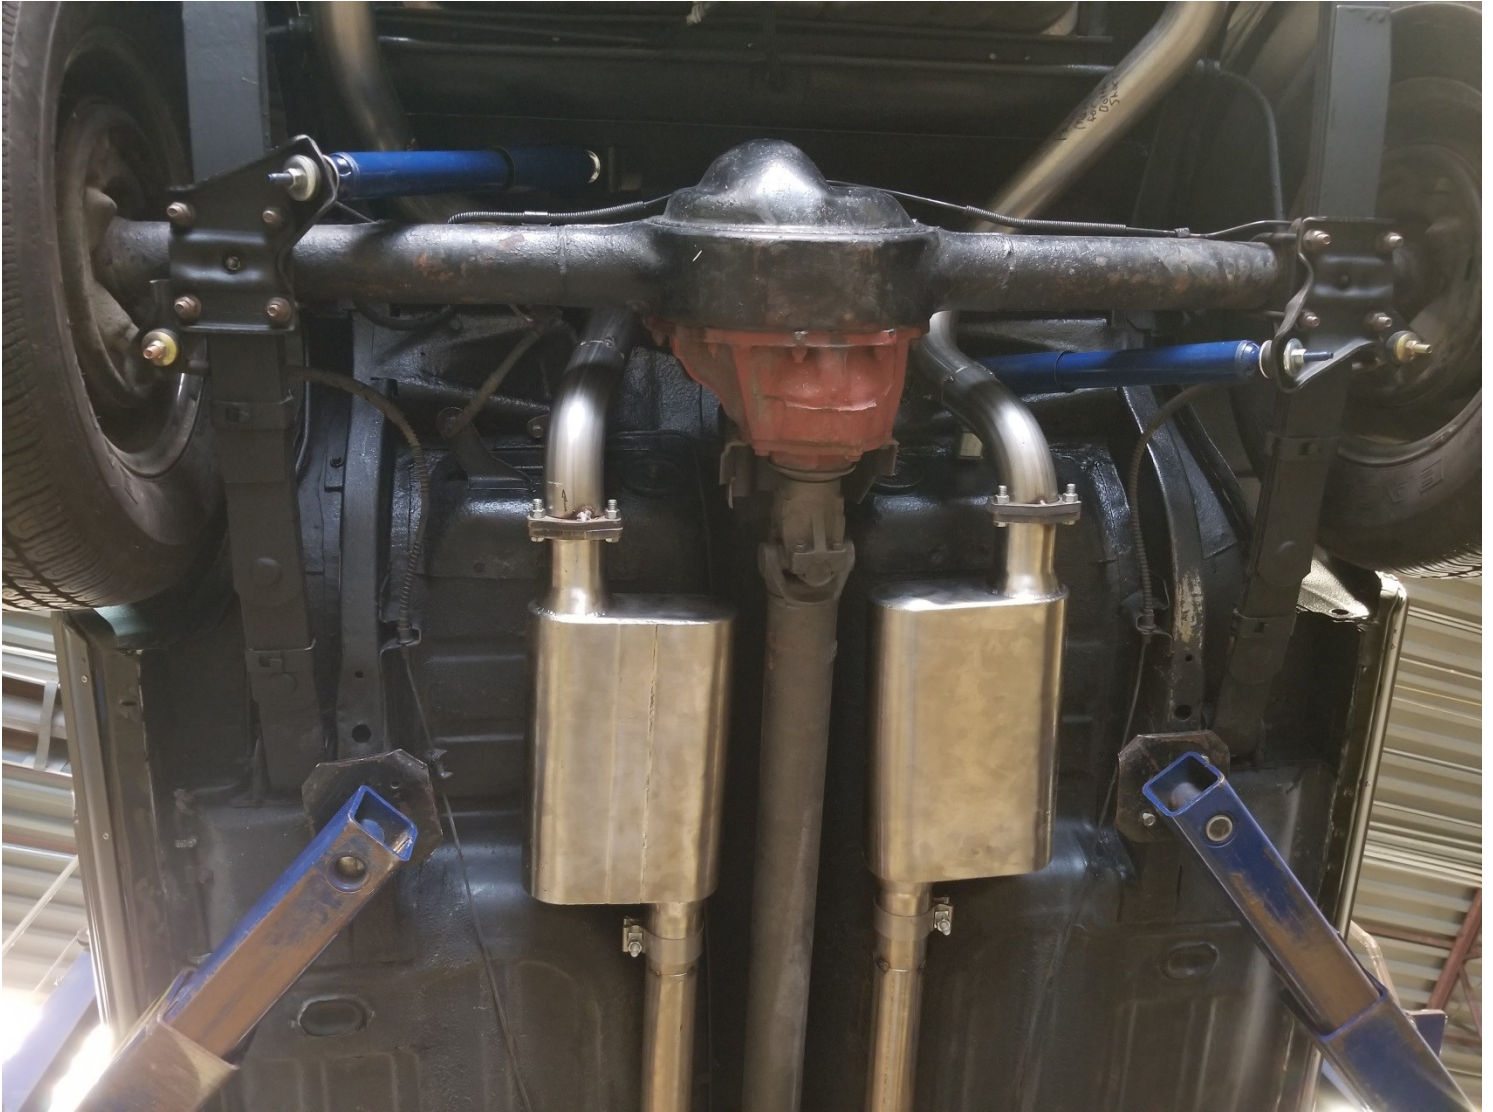


Instructions

1. Position exhaust in vehicle as seen in pictures below:

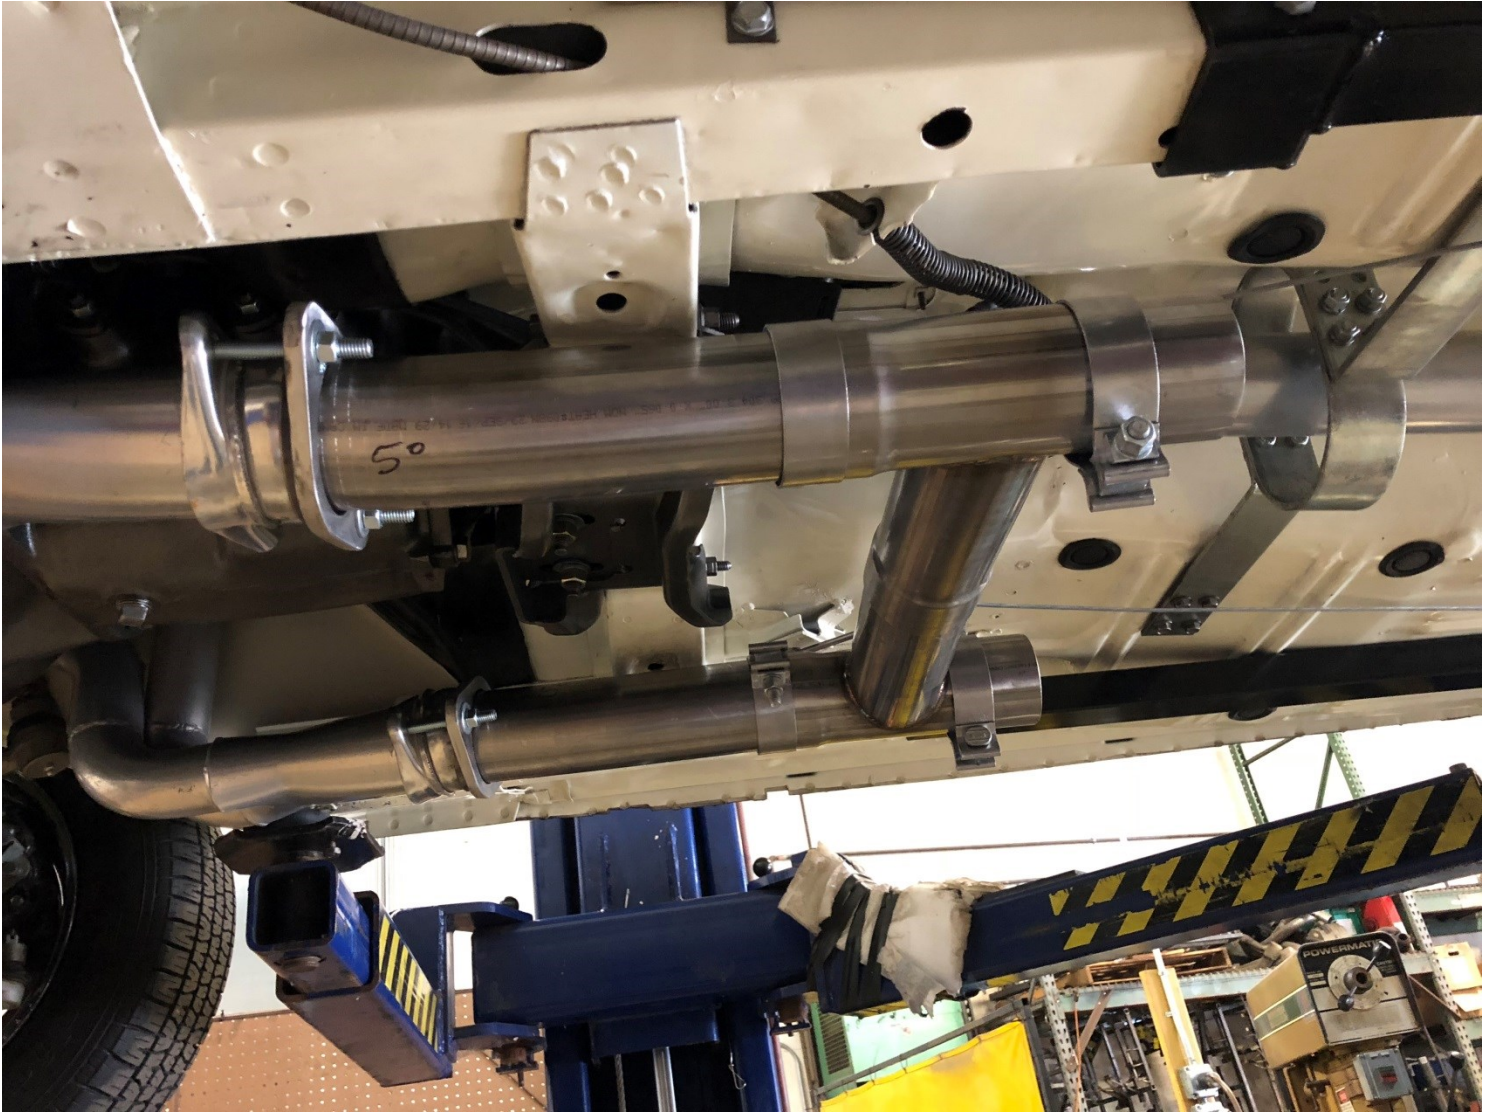


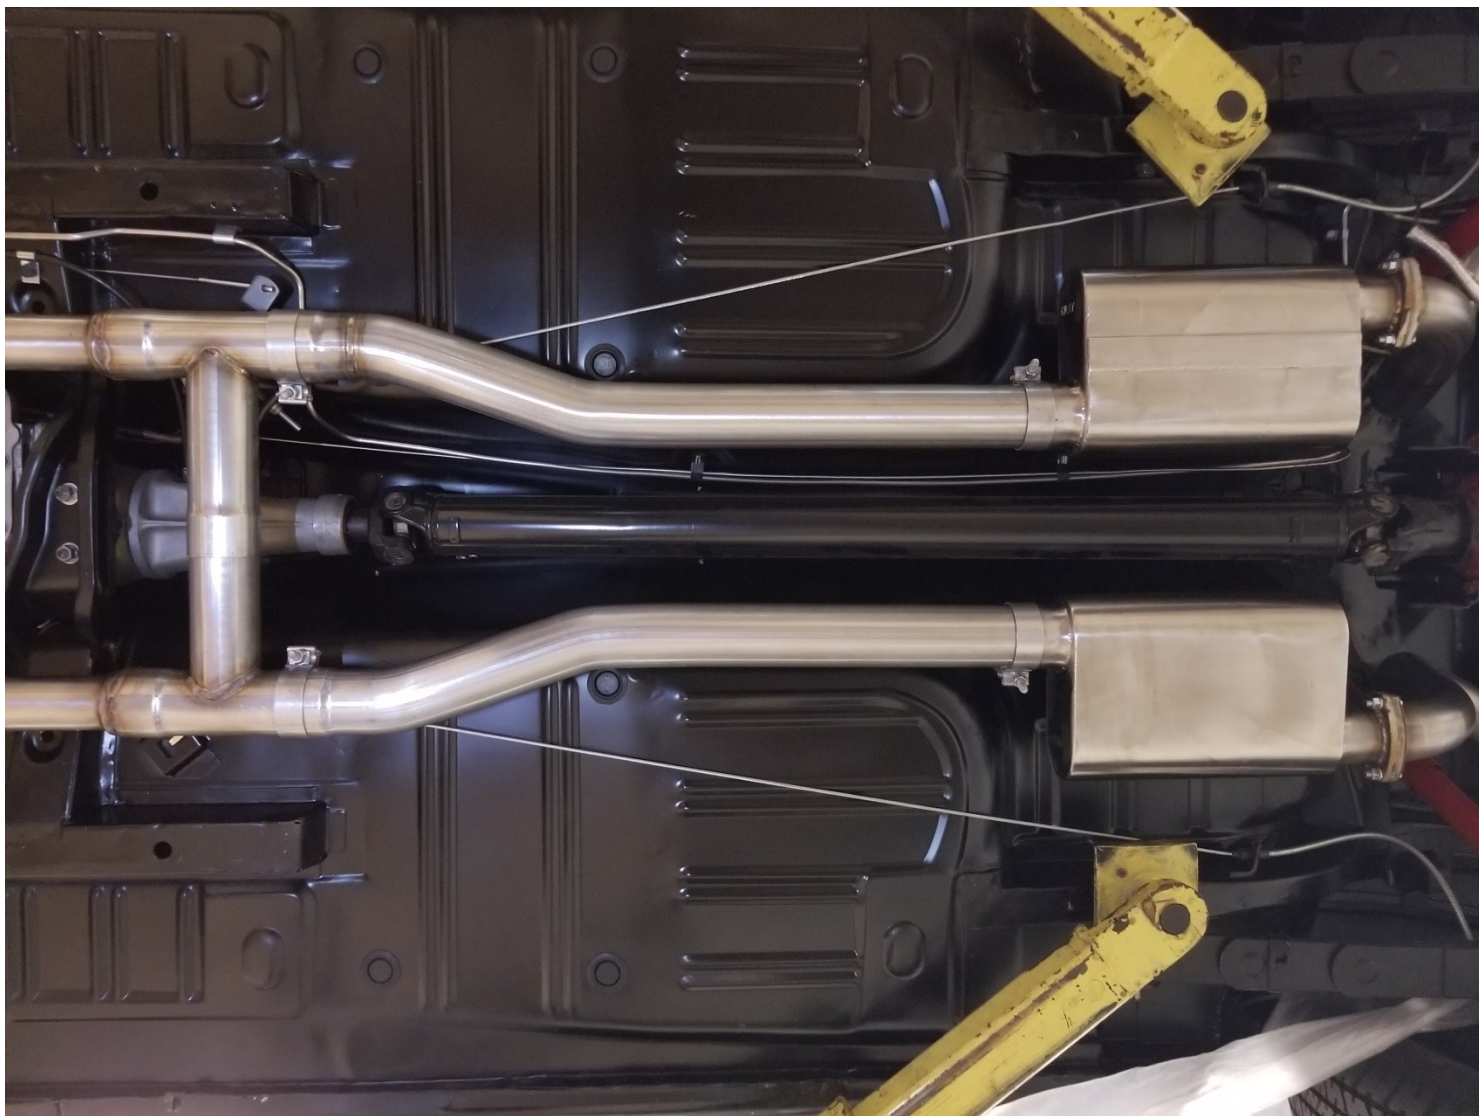



Exhaust hanger locations are in the same location for standard and staggered shock configurations, the pictures below show both standard and staggered install.

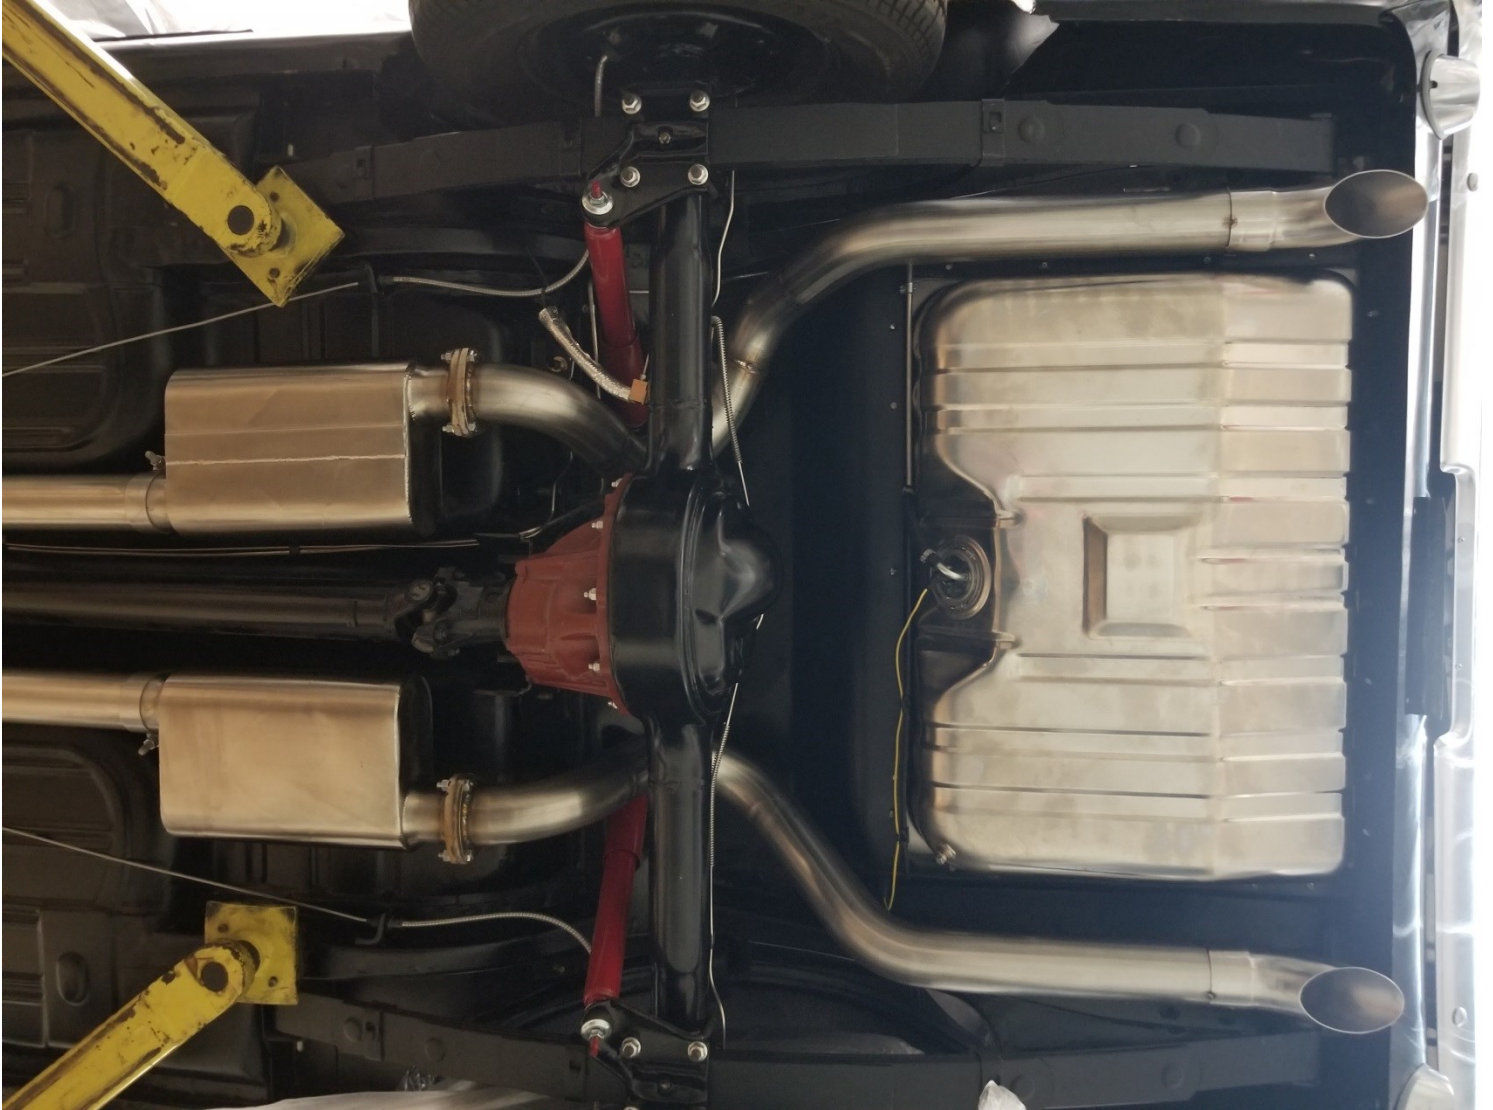



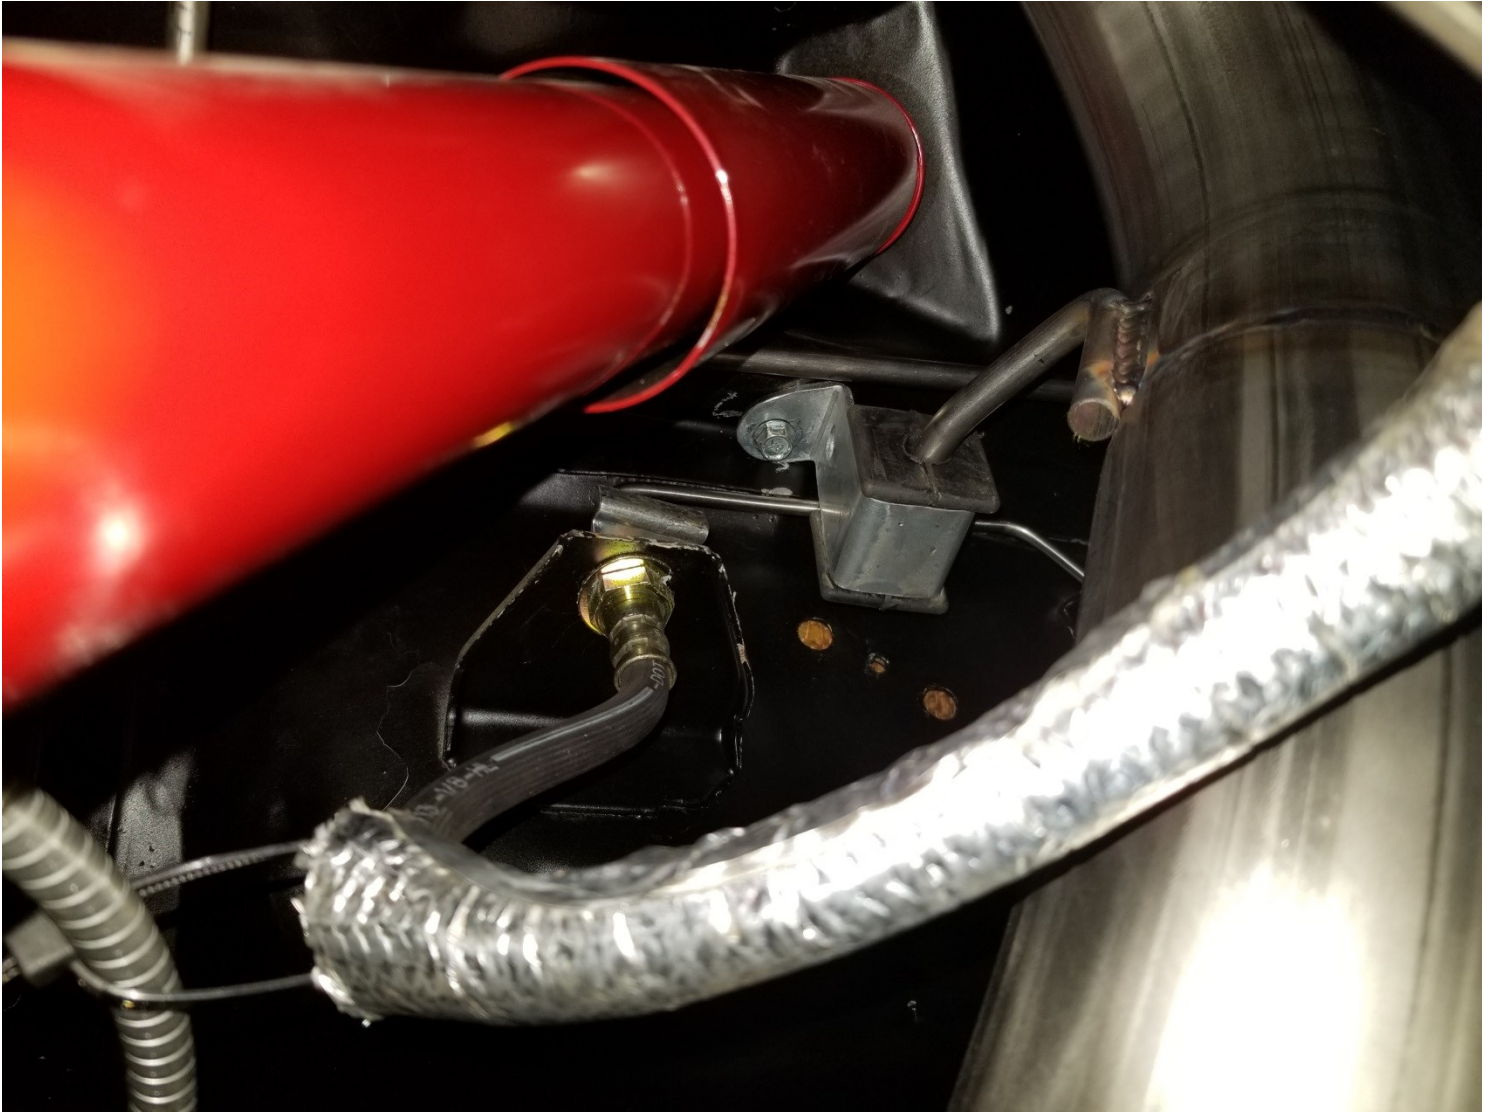

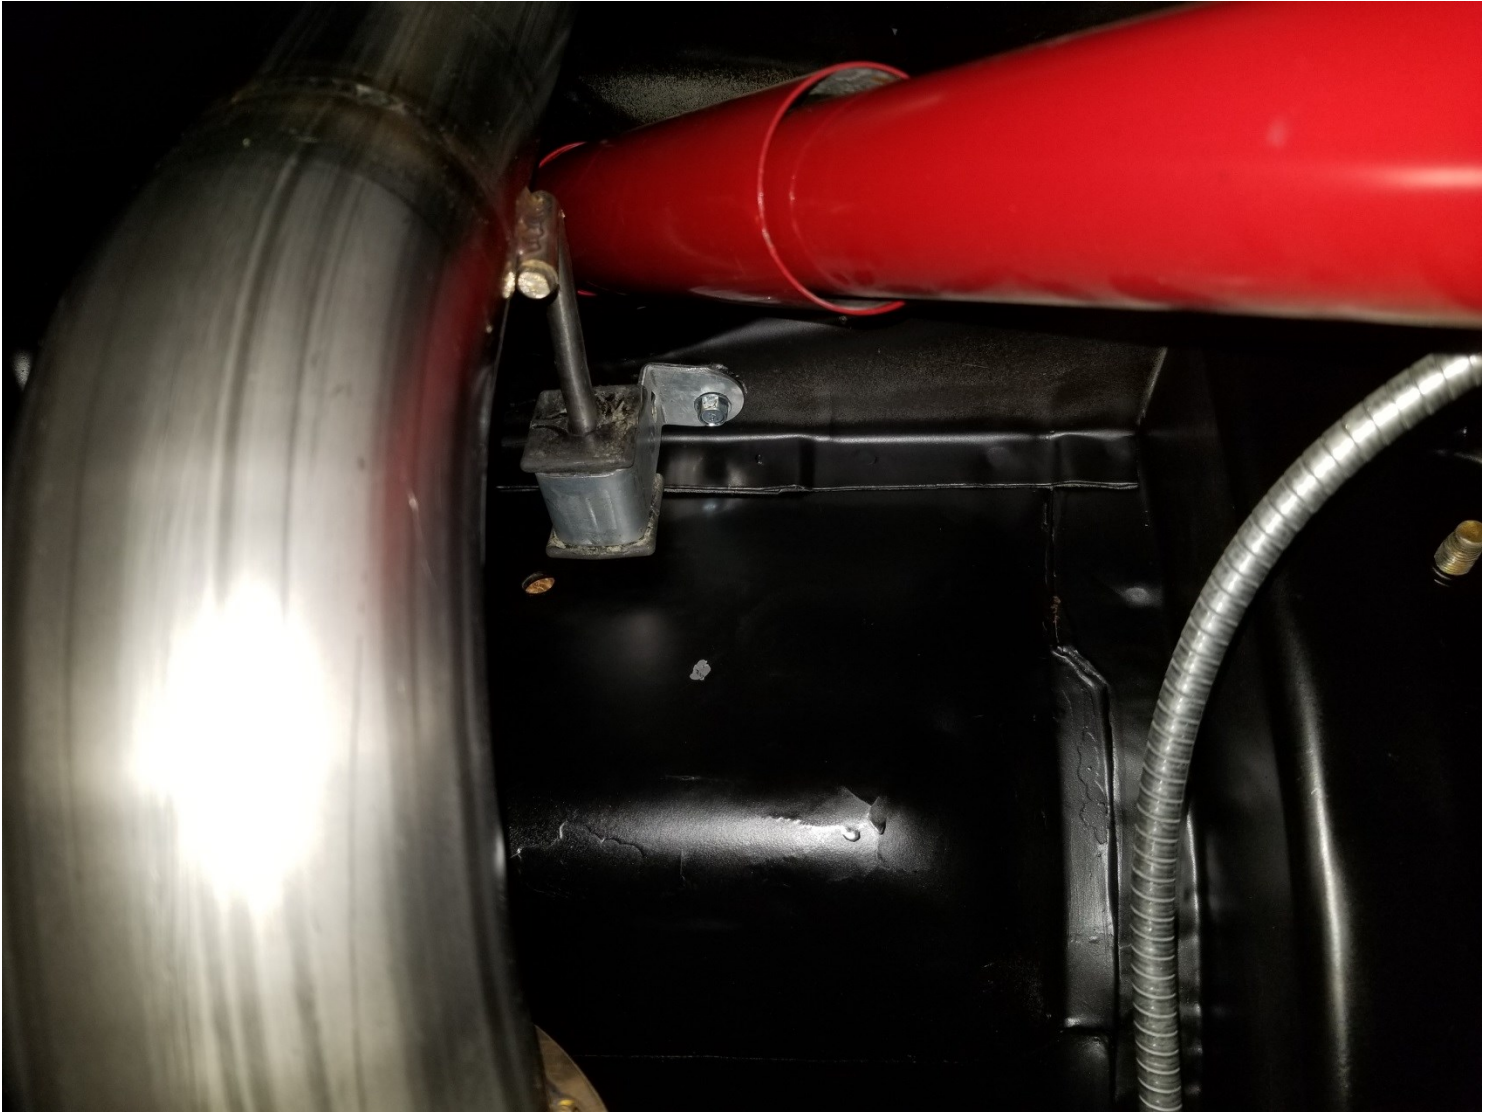


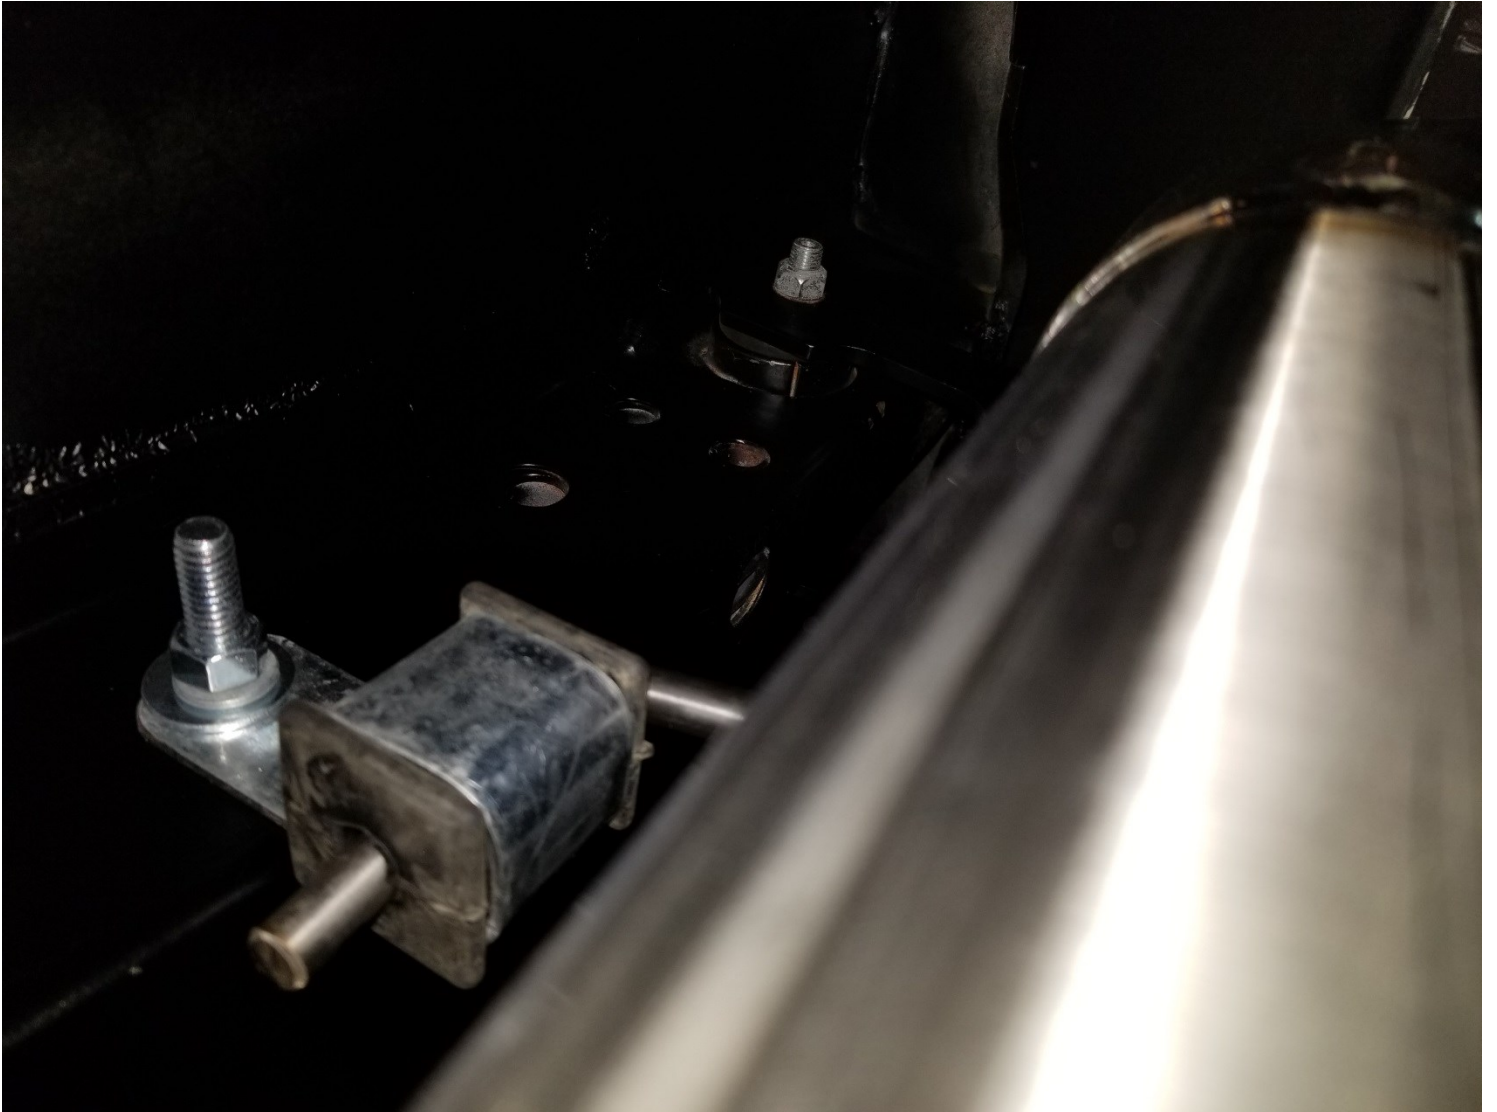






The following images with blue shocks show the staggered shock hangers installed.

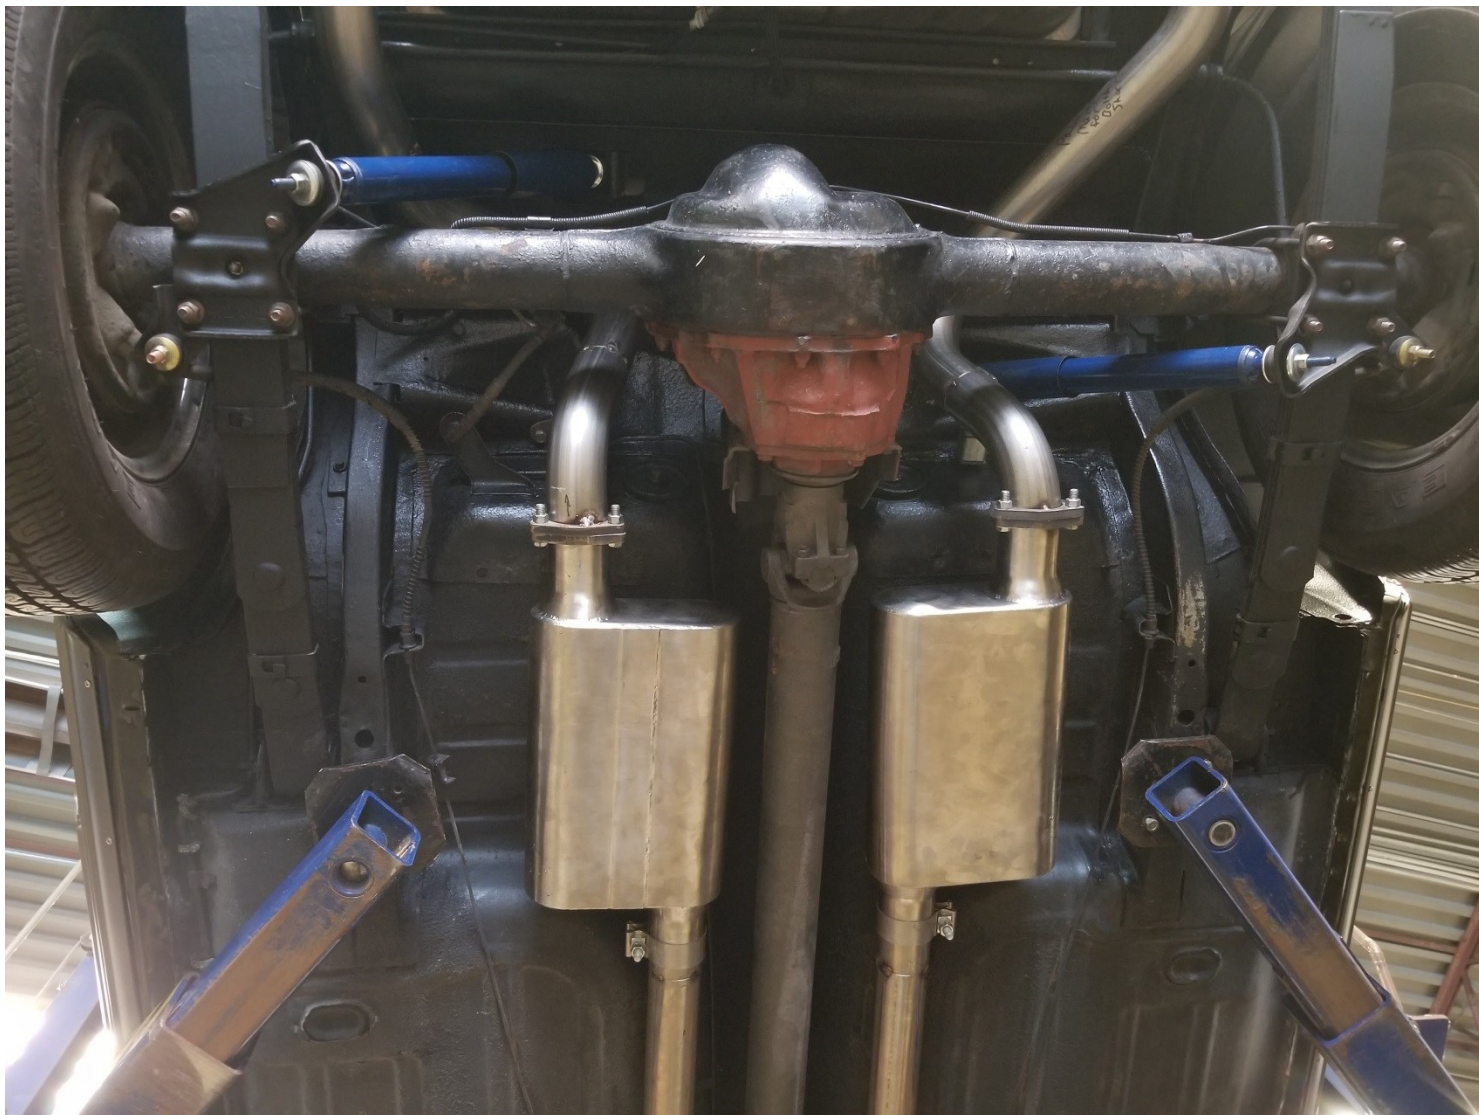





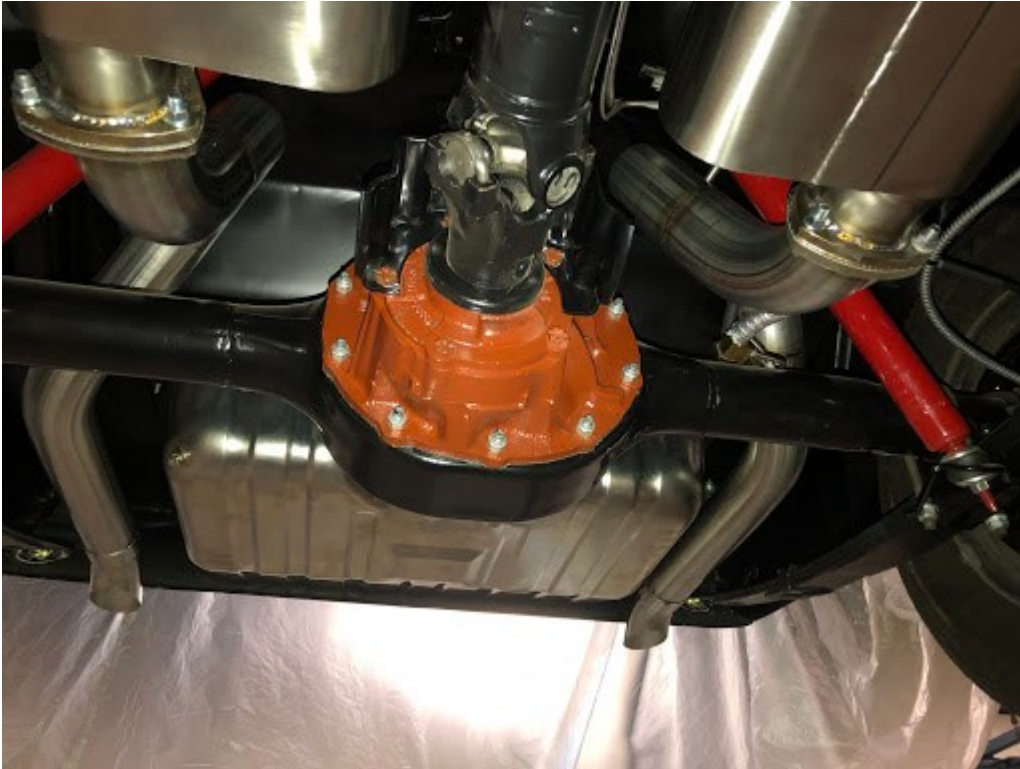



MRT appreciates your business; please feel free to contact us at any point with questions or concerns at 734-455-5807 or via email at Sales@MRT-Direct.com