

## 2015 Mustang Axle-Back Exhaust



**Intercepter**



**KR Muffler Delete**


### Products

- 91U900 – 2015-17 Mustang 5.0L GT Intercepter Axle-Back Exhaust
- 91U901 – 2015-17 Mustang 5.0L GT KR Muffler Delete Exhaust
- 91U902 – 2015-19 Mustang 2.3L EcoBoost Intercepter Axle-Back Exhaust
- 91U903 – 2015-19 Mustang 2.3L EcoBoost Muffler Delete Exhaust
- 91U920 – 2018-19 Mustang 5.0L GT Intercepter quad tip Axle-Back Exhaust
- 91U921 – 2018-19 Mustang 5.0L GT KR Muffler Delete quad tip Exhaust

### Materials Included

*STOP – Verify that all of the following components are included in kit before beginning installation:*

- Qty (1) – LH MRT Axle-back Muffler
- Qty (1) – RH MRT Axle-back Muffler
- Qty (2) – 2 1/2" Band Clamps (for GT systems #91U900, #91U901, #91U920 and #91U921 only)
- Qty (2) – 2 1/4" Band Clamps (for EcoBoost systems #91U902 and #91U903 only)

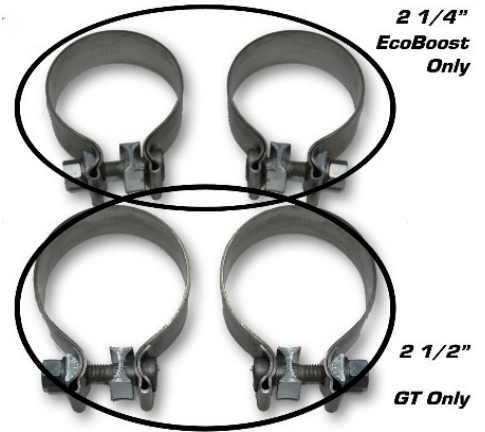


### Required Tools

- 15mm Deep Socket
- 13mm Deep Socket
- Ratchet
- Cutting tool

### Warranty Information


**IMPORTANT** – The warranty on this product is VOID if the product is not properly installed, or has been modified or altered in any way. If you believe that modification will be required to fit an MRT Exhaust System on your vehicle, **please contact** MRT for assistance **BEFORE** making any modifications to the system.

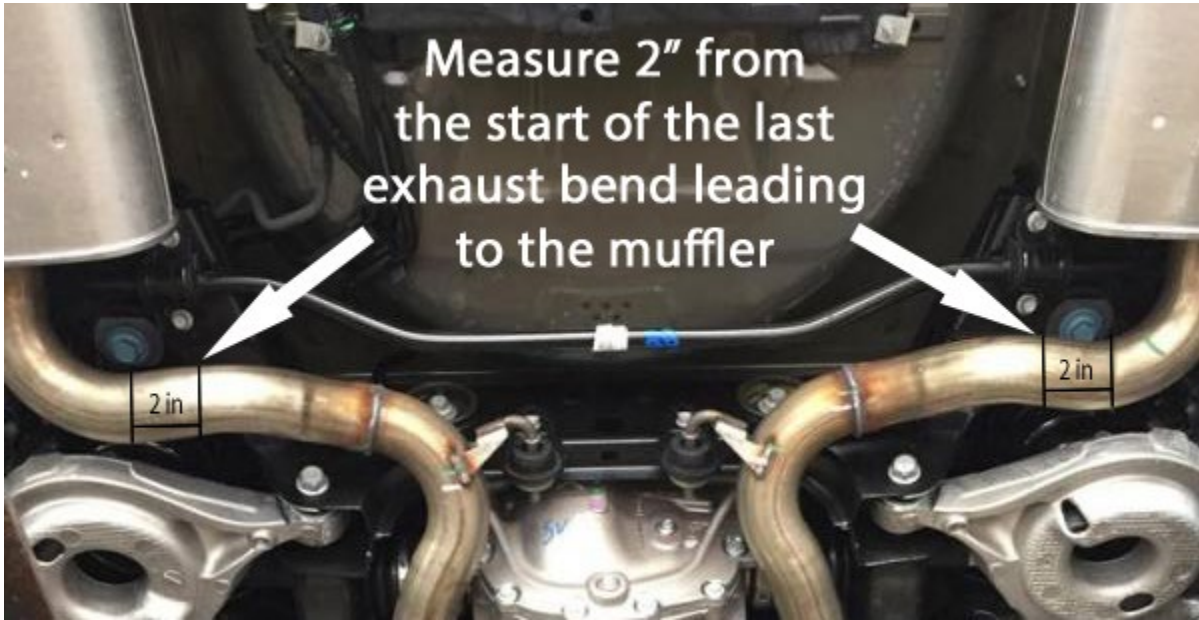

**FIGURE 1**

**STEP 1:** With the vehicle in the air, measure 2" inward from the beginning of the last bend in the factory exhaust (fig 1)

**STEP 2:** Cut both sides of the OE exhaust at this mark.

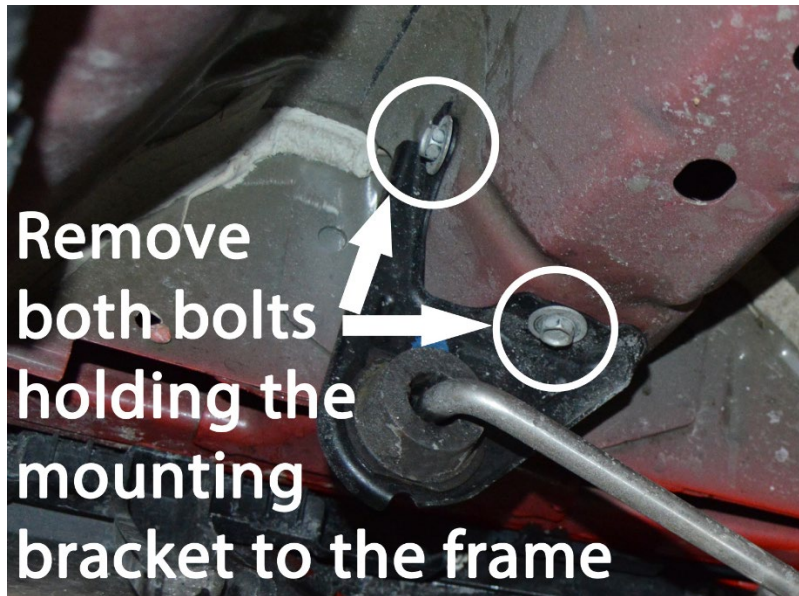

**FIGURE 2**

**STEP 3:** Remove both 13mm bolts holding the hanging rod mounting bracket into place. There is a tab at the top of the bracket that will keep it from falling. Lift the bracket and remove the muffler assembly (fig 2)

**STEP 4:** Transfer the OE mounting brackets onto the MRT Axle-back mufflers, be sure they are orientated the same way they were on the OE muffler.



**FIGURE 3**

**STEP 5:** Slide the band clamps provided with the kit onto the factory under-axle pipes. Then slide the MRT Axle-back muffler in place (fig 3). **NOTE:** Don't tighten the clamp at this point.



FIGURE 4

**STEP 6:** Use the tab on the top of the mounting bracket to hold it in place. Tighten bracket using both OE 13mm bolts (fig 4)



FIGURE 5

**Step 7:** Tip Adjustment. If you find adjust needs to be made to the exhaust tip, this can be accomplished one of two ways. Either by rotating the muffler clockwise or counter-clockwise, or by adjusting how far the MRT exhaust pipe is slid over the OE exhaust.

**STEP 8:** Line the two band clamps so they are even with the edge of the MRT Axle-back pipe and tighten to 35 lb-ft. (fig 5)



**Now you're all set to take her for a spin!!! Enjoy the ride!**

MRT appreciates your business; please feel free to contact us at any point with questions or concerns at 734-455-5807 or via email at [Sales@MRT-Direct.com](mailto:Sales@MRT-Direct.com)