

PART #350 & #351**INSTRUCTIONS FOR INSTALLING KEY LOCK**

STEP 1: Remove key cylinder form factory deck lid or hatch.

STEP 2: When installing key cylinder clip, follow **Fig. A**.

Key cylinder clip front profile

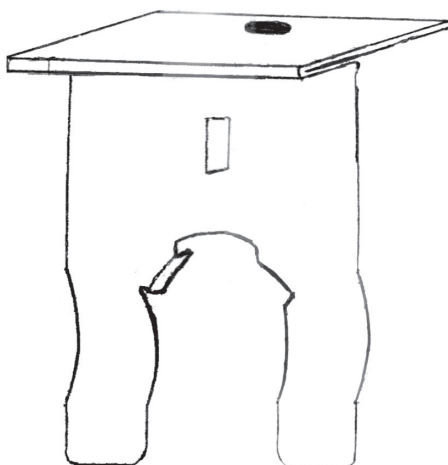
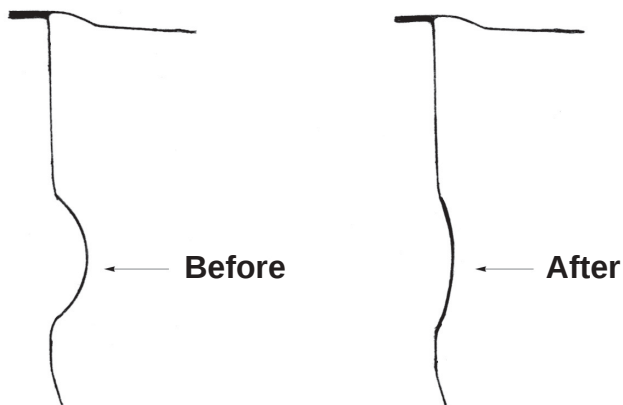


Fig. A.
side profile of clip

**PART # 350**

NO ADDITIONAL HARDWARE REQUIRED

PART # 351

QTY	DESCRIPTION	HARDWARE #
8	1/4" x 20 x 3/4" BOLTS	92865A540
8	1/4" x 20 WASHERS	90108A029
2	STOPPERS	9405K54
2	BALL STUD	9512K73

