

Part # 4444 & 4445

2015-2017 Ford Mustang C-Series Upper & Lower Grilles

Notice: Install new, painted parts according to these instructions!
Altered Parts are Non-Refundable!

Step 1

Using a flat head screw driver, remove the push pins that hold the radiator cover in place and then remove the radiator cover. Remove six, 8mm screws attaching the front bumper to the car as shown in Fig. A. Remove two, 7/32" screws next to each headlight under the rubber seal as shown in Fig. B.

Fig. A



Fig. B



Step 2

Using a flat head screw driver, remove three plastic push pins in each wheel well as shown in Fig. C. To access a screw behind the left side wheel well plastic shield, you will need to turn the wheel all the way to the right side, pull the plastic wheel well back to gain access to the 7mm screw that holds the bumper to the fender, as shown in Fig. D (a ratchet wrench will work best to remove this screw). Repeat on right side. Turning the wheel in the opposite direction to gain access.

Fig. C

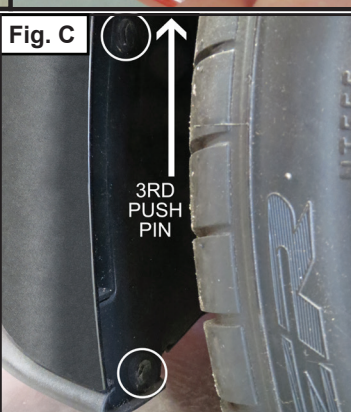
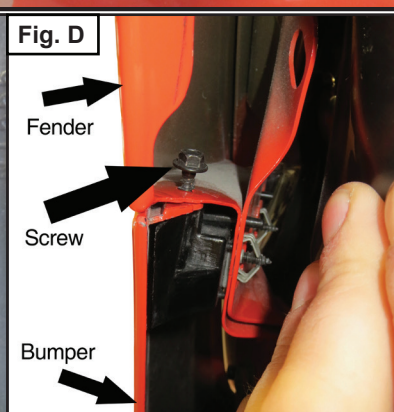


Fig. D



PART # 4444

QTY	DESCRIPTION	HARDWARE #
16	PHILLIPS SCREWS	PHL/PH/BL/.375
14	1/2" PHILLIPS SCREWS	PHL/PH/BL/.05
1	HEX CENTER SCREEN	026
2	HEX SIDE SCREENS	027 L-R
14	CLIPS	071
1	ROLL OF 1/2" 2-SIDED TAPE	VHB 20

PART # 4445

QTY	DESCRIPTION	HARDWARE #
15	PHILLIPS SCREWS	PHL/PH/BL/.375
12	1/2" PHILLIPS SCREWS	PHL/PH/BL/.05
1	HEX CENTER SCREEN	028
2	HEX SIDE SCREENS	029 L-R
12	CLIPS	071
1	ROLL OF 1/2" 2-SIDED TAPE	VHB 20

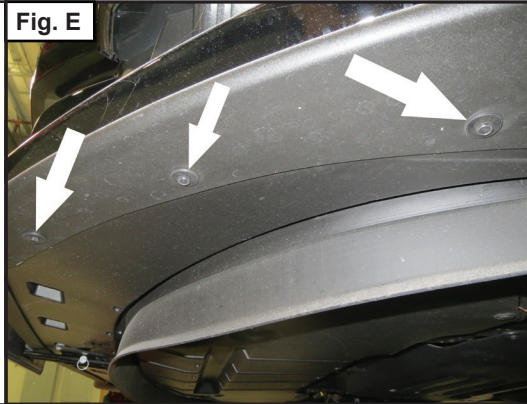
TOOL AND MATERIALS LIST

QTY	DESCRIPTION
1	.25" DRIVE RATCHET
1	7MM SOCKET
1	8MM SOCKET
1	7/32" SOCKET
1	PHILLIPS HEAD SCREWDRIVER
2	LARGE FLAT HEAD SCREWDRIVER
1	STAND
1	CORDLESS DRILL
1	7MM RATCHET WRENCH
1	3/16" DRILLBIT
1	OFFSET RIGHT ANGLE PHILLIPS HEAD SCREWDRIVER

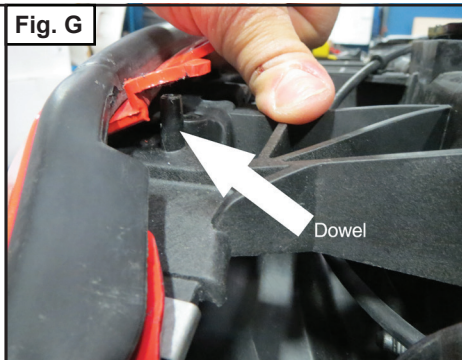
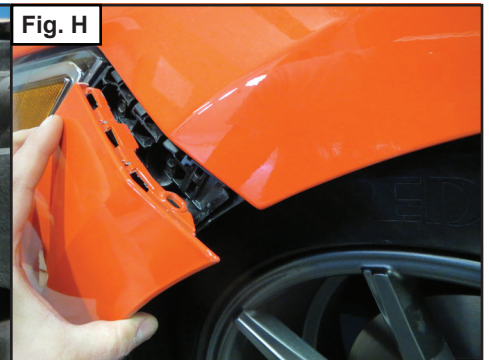


Step 3

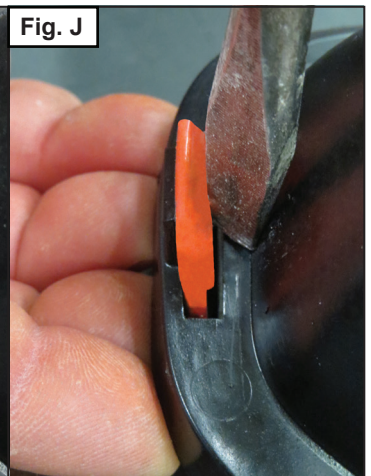
Remove twelve, 8mm screws that attach the lower splashpan to the bumper and chin spoiler as shown in Fig. E & F.

Fig. E**Fig. F****Step 4**

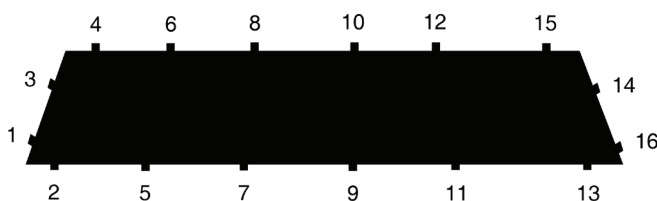
Two people will be required to remove the front bumper from the car. A cloth covered stand is needed to place the painted bumper on. Pull up on the front ledge of the bumper to clear the line up plastic dowels on the reinforcement of the car as shown in Fig. G. While staying clear of the dowels, pull out on the bumper where it meets the fender to unsnap the bumper from the fender as shown in Fig. H. With the bumper pulled away slightly, unplug the blinker and fog light harnesses. Now place the bumper on a stand with the painted surface on the towels.

Fig. G**Fig. H****Step 5**

Remove the center plastic 8mph impact bar. This will be reinstalled in Step 10. To remove the grilles you will need to have 2 people working on this and 2 large flat head screw drivers. In order to unlock the tabs holding the grilles in place it is best to work on 2 tabs close together at the same time. Starting on one side of the grille apply pressure to the tabs as shown in Fig. I. Then place your finger tips under the grille and pull upward as shown in Fig. J. You will need to unlock the tabs on one side and work your way to the other side. The order in which you should remove the tabs is illustrated in Fig. K.

Fig. I**Fig. J****Fig. K**

Remove grille tabs as shown

**Upper Grill****Lower Grill**

Step 6

Loosely install clips using the screws provided in the hardware packet as shown in Fig.L.

Fig. L**Step 7**

Install the grilles from the back side of the bumper allowing the factory tabs to be in between the grilles and the clips previously installed.

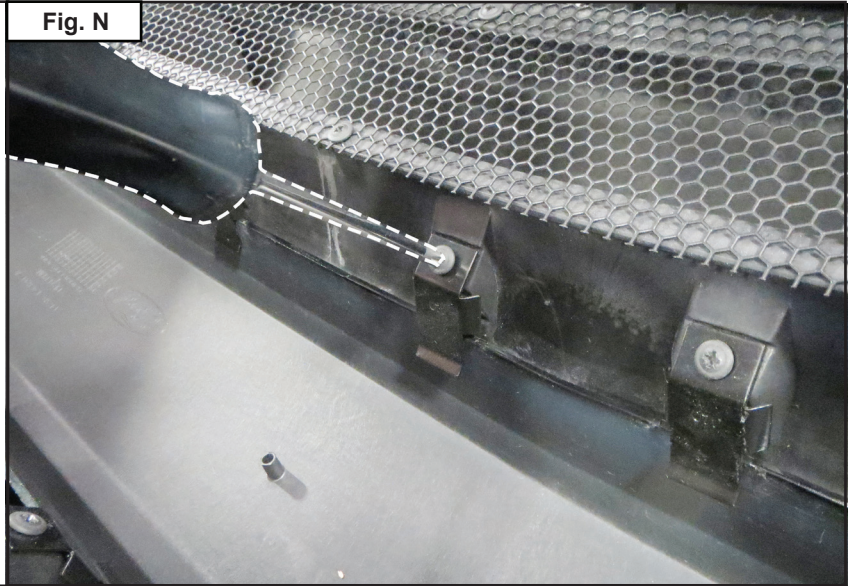
Step 8

The grilles have a ledge on the bumper with a lock, the ledge and lock need to fit together as shown in Fig.M. (Clip removed to show fitment)

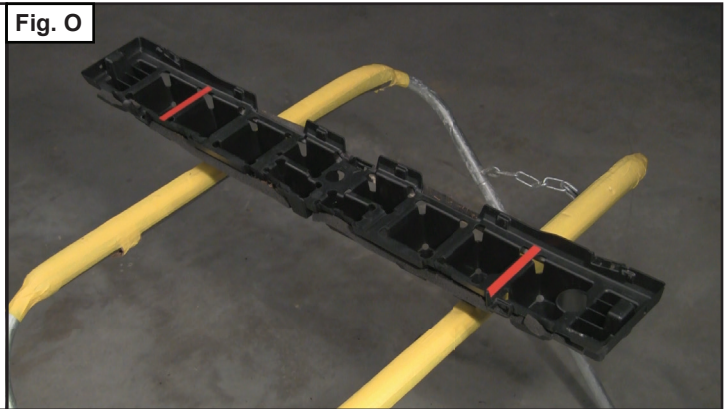
Fig. M

Step 9

Tighten all clips and pay close attention to the ledge and lock on each as shown in Fig.N.

Fig. N**Step 10**

Using isopropyl alcohol, clean the 2 flat surfaces on the 8mph impact bar where the 2 sided tape is installed in Fig. O. Then install the 2 sided tape. Hold the impact bar up to the car and position it centered from left to right. Take note where the 2 sided tape will come in contact with the area of reinforcement. Clean the area of reinforcement with isopropyl alcohol and install the impact bar.

Fig. O**Step 11**

Once this is complete you can reinstall your bumper onto the car.

