



INSTALLATION INSTRUCTIONS

PART No.

FB25101

**Jeep® JL Wrangler
Wheel Well Storage Bins**



REQUIRED TOOLS

T50 Torx Bit
5mm Allen

KIT CONTAINS

Storage bins (Left and Right)
Quick Install Knobs
Washers
Lock Washers (for soft-tops only)
Button Head Bolts (for soft-tops only)

QTY

1 EA
4
4
2
2


There are three (3) installation methods depending on your Jeep's current configuration. Please follow the instructions accordingly:

- A. Hard top with top on
- B. Hard top with top off
- C. Soft top* – with top up or down

A. FOR HARD TOP MODELS WITH TOP ON:

1) **UNBOLT YOUR HARD TOP**

Inside your lift gate your hardtop will be bolted down by 6 bolts, with 3 on either side. Remove the innermost 2 on either side using a T50 Torx bit.

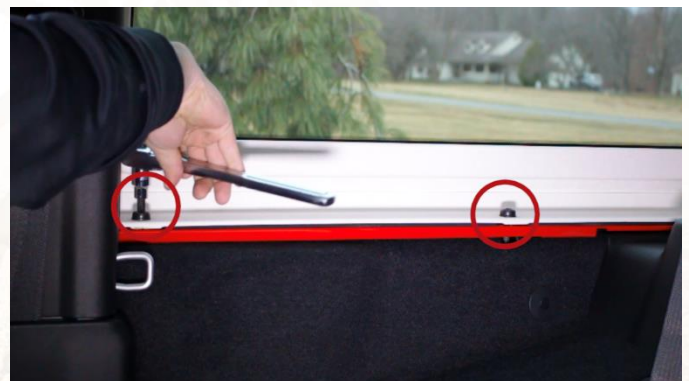

2) **INSTALL STORAGE BINS**

Place the corresponding bin over the bolt holes.

Either using all of your OEM hardware, or the supplied four (4) knobs and washers, secure the storage bins in place.

2510100

Jeep® JL Wrangler Wheel Well Storage Bins

NOTE: Hard top Jeeps will not use the supplied lock washers and button head bolts.



Secure the center bracket using 2 of the supplied Hardtop Knobs.



Secure the innermost bracket using a 5mm Allen with 2 of the supplied button head bolts, led by a flat washer and lock washer.

Repeat on the opposite side.

Resecure your soft-top.



**ENJOY YOUR NEW SET OF FISHBONE OFFROAD
WHEEL WELL STORAGE BINS!**

B. FOR HARD TOP MODELS WITH TOP OFF:

1) **INSTALL STORAGE BINS**

With the top already off the Jeep, simply place the storage bins over the 2 innermost hardtop holes. Secure them in place using the supplied knobs and washers or your OEM hardware.

**To reinstall your hardtop, you must uninstall the storage bins first.*



C. FOR SOFT TOP MODELS

1) **INSTALL STORAGE BINS**

If your soft-top is up, remove the side windows and door surrounds.

With or without the soft top on (or down), place the bin over the 2 innermost hardtop holes.