

2015+ 5.0L Mustang GT Resonator Delete H-Pipe Exhaust System

Part No. 98U907



Materials Included

STOP – Verify that all of the following components are included in kit before beginning installation:

- Qty (1) - 2 ½" Resonator Delete H-pipe
- Qty (2) – 2 ½" Clamps

Required Tools

- 15mm Deep Socket
- 13mm Deep Socket
- Ratchet

Warranty Information

*IMPORTANT – The warranty on this product is VOID if the product is not properly installed, or has been modified or altered in any way. If you believe that modification will be required to fit an MRT Exhaust System on your vehicle, **please contact** MRT for assistance **BEFORE** making any modifications to the system.*

Instructions

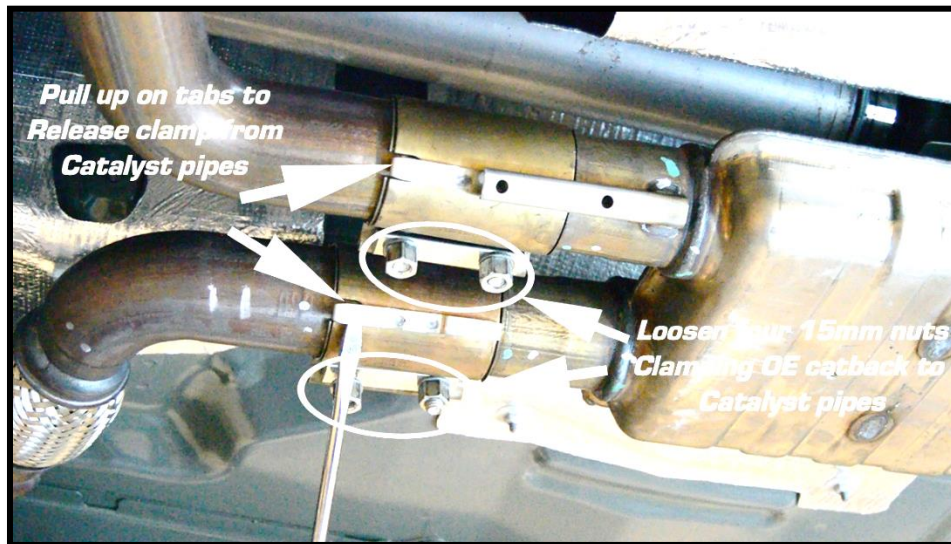


FIGURE 1

STEP 1: Loosen the two 2.5" collars attaching the OE Catalyst pipes to the factory catback exhaust. You will also need to pry the small metal clips off of the locking tab to release the collars. (fig 1)

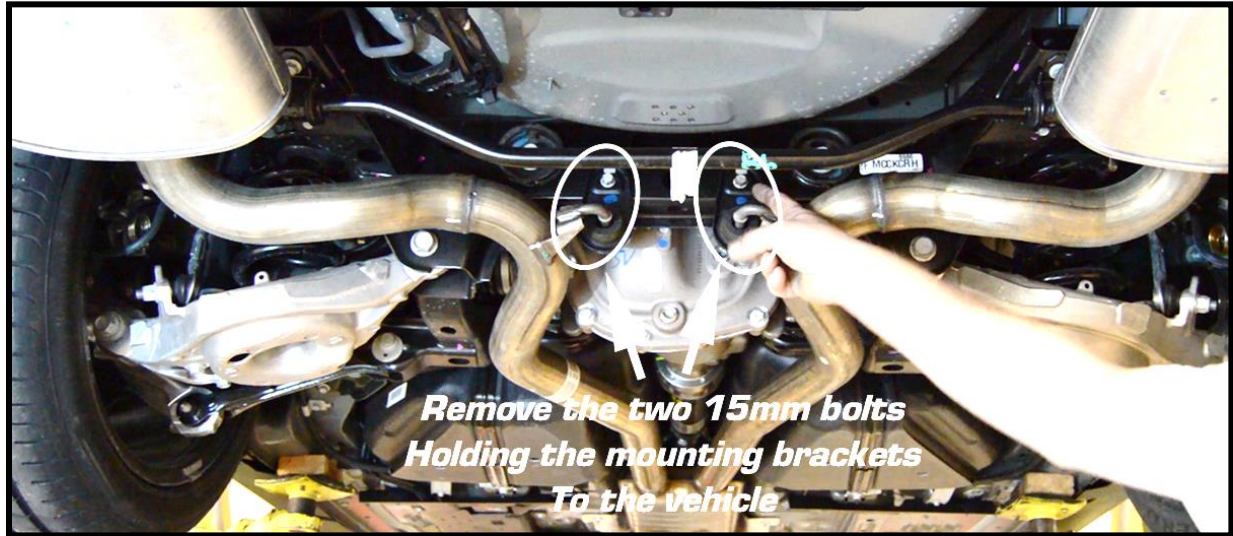


FIGURE 2

STEP 2: Remove the two 15mm bolts holding the exhaust mounting bracket. The brackets will be removed with the exhaust. (fig 2)

STEP 3: With the assistance of another person, remove the factory exhaust from your vehicle.



FIGURE 3

STEP 4: Slide the 2 1/2" OE collars over the factory Catalyst pipes. (fig 3)

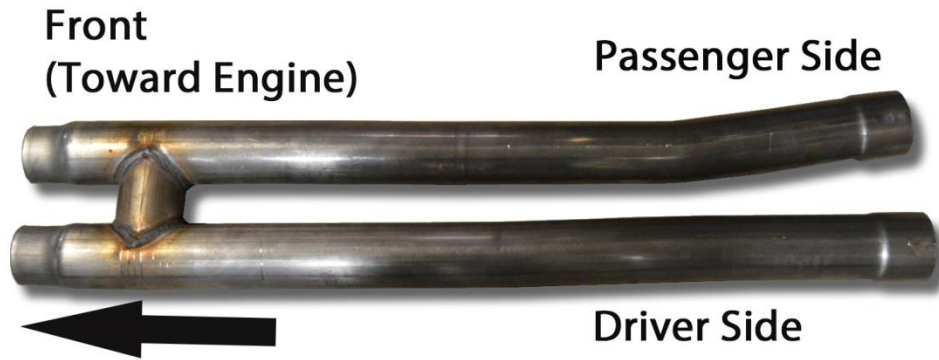


Figure 4

STEP 5: Slide the MRT H-pipe into place, ensure that the “H” section of the pipe is facing forward. You’ll notice that one of the pipes has a slight angle at the end of it, this is the passenger side. (fig 4)

STEP 6: Slide one of the provided 2 ½” band clamps over each side of the MRT H-pipe, DO NOT tighten yet.

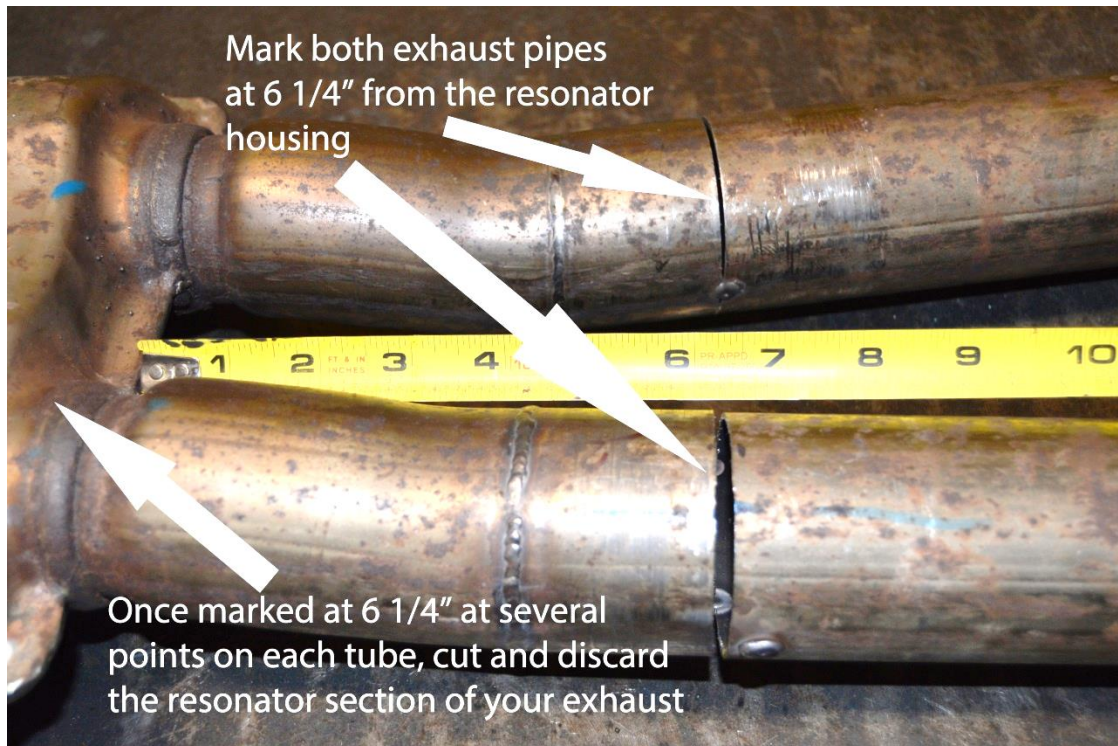


Figure 5

STEP 7: Cut the Resonator section off your OE catback as shown above (fig 5).

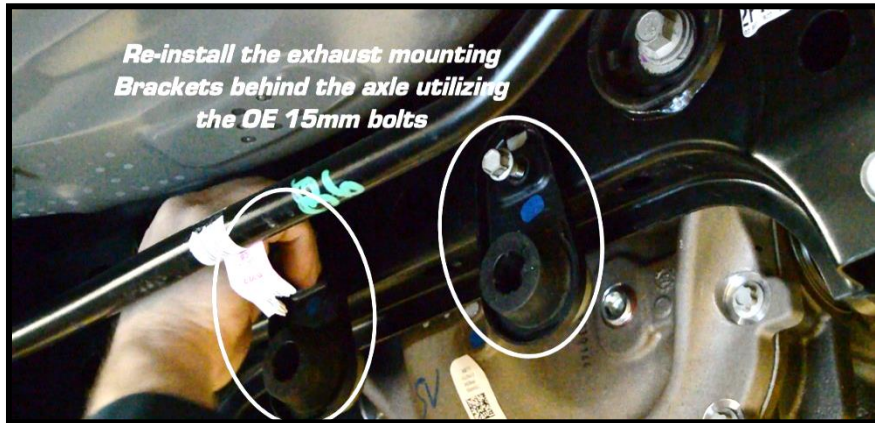


FIGURE 6

STEP 8: Re-install the mounting brackets and grommets which were removed in step 2. (fig 6)

STEP 9: Slide the Driver side OE under-axle pipe and muffler into place, be sure that all hanging brackets are in the OE mounting grommets. Now repeat for passenger side.

STEP 10: Once the OE Mufflers are in place, tighten the clamps attaching the MRT H-pipe to the OE Catalyst pipes and OE under-axle tubes.

STEP 11: Once you've tightened all of the clamps, and checked your exhaust tip alignment, you're ready to take her out for a spin!

MRT appreciates your business; please feel free to contact us at any point with questions or concerns at 734-455-5807 or via email at Sales@MRT-Direct.com