

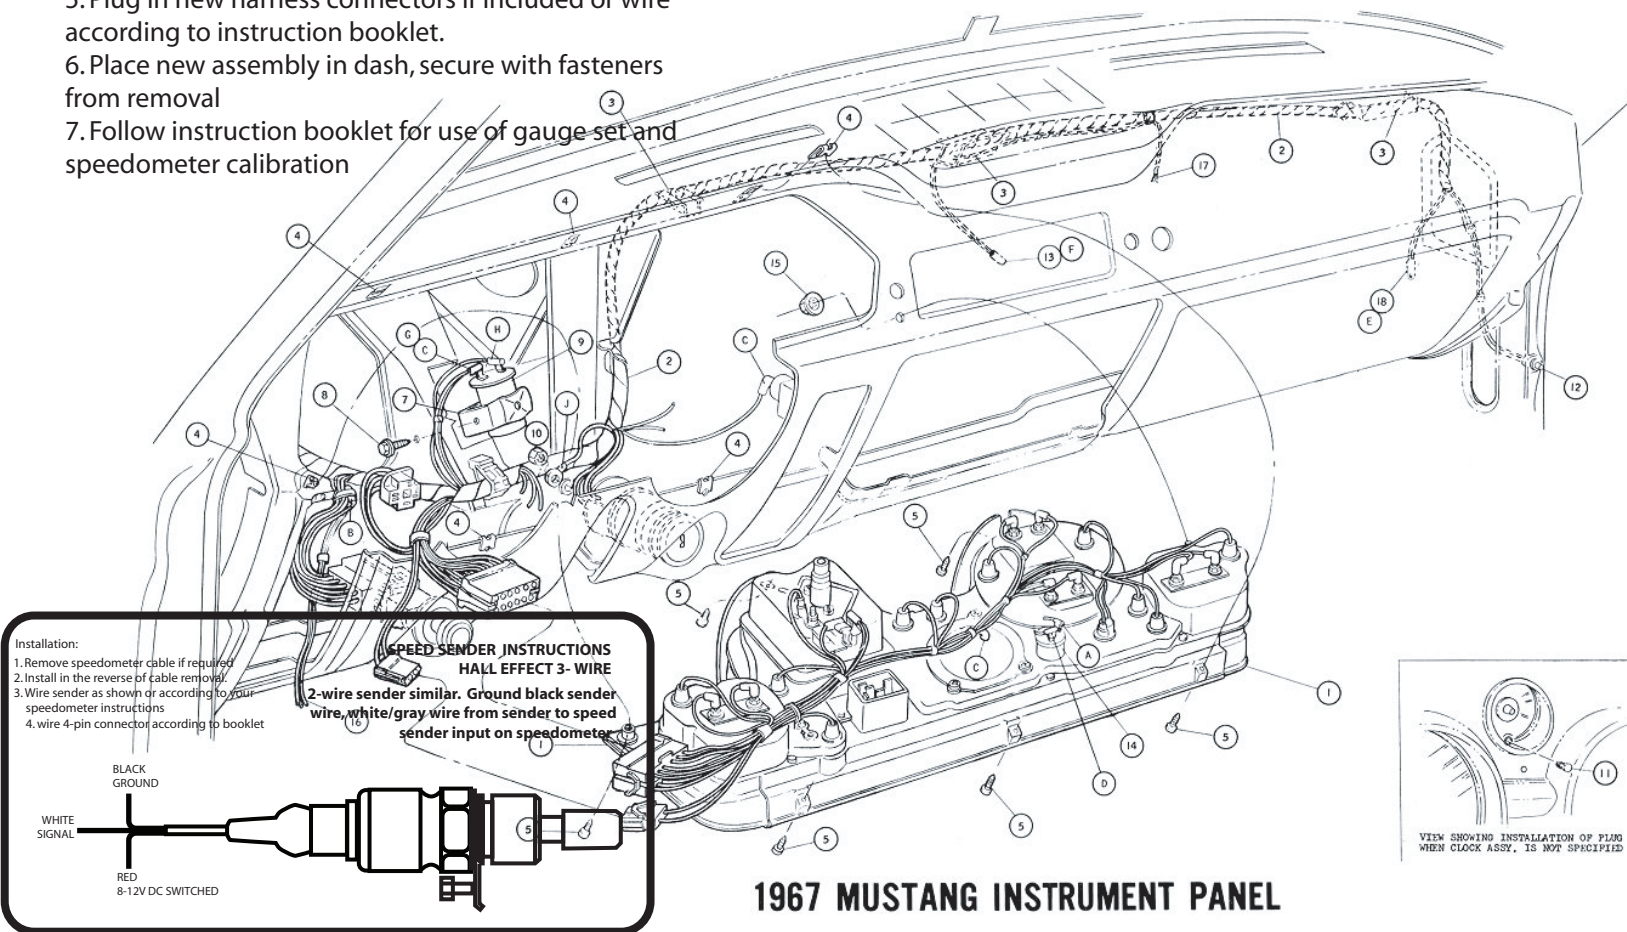


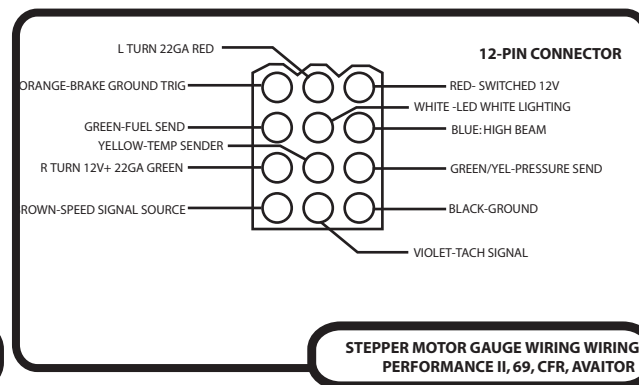

NEW VINTAGE USA
2415 BURDETTE
FERNDALE, MI 48220
248.850.5482


67-68 MUSTANG PANEL ASSEMBLY

1. Remove original panel by unscrewing fasteners around panel, save fasteners for use on new panel.
2. Un-plug all connectors, speedometer cable, etc. Note wire locations. Remove original wiper switch, check for fitment and install. Wiper switch may require drilling 2 mounting holes in panel support for exact fitment.
3. Splice new wiring harness (if used) into old wiring or per harness instructions
4. Install gauges in panel as needed in new panel and tighten back clamps
5. Plug in new harness connectors if included or wire according to instruction booklet.
6. Place new assembly in dash, secure with fasteners from removal
7. Follow instruction booklet for use of gauge set and speedometer calibration

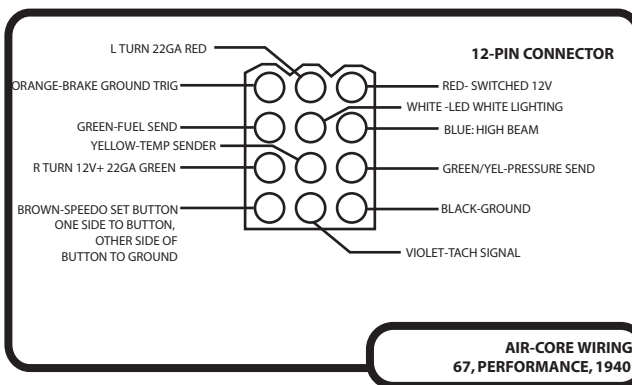

- 1 10849 CLUSTER ASSY.
- 2 PART OF 14401 WIRING ASSY.
- 3 LOCATORS PART OF 14401 WIRING ASSY.
- 4 351689-SA1 SPRING NUT
- 5 375954-S100 SCREW
- 6 53049-S13
- 7 C1TF-13351-A BRACKET
- 8 42120-S2 SCREW
- 9 FLASHER ASSY. EMERGENCY WARNING
- 10 34656-S36 NUT & WASHER ASSY.
- 11 PLUG INSTR. CLUSTER LENS OPENING
- 12 JAMB SWITCH
- 13 FLASHER ASSY.
- 14 375975-S STAMPED NUT
- 15 TO HEATER CONTROL SWITCH
- 16 TO HEATER RESISTOR
- 17 TO COURTESY LAMPS
- 18 TO GLOVE BOX LAMP

- A 8 ORANGE-YELLOW
- B 14A BLACK
- C 40 BLUE-WHITE
- D 44 BLUE
- E 53C-D BLACK-BLUE
- F 54C GREEN-YELLOW
- G 383 RED-WHITE
- H 385 WHITE-RED
- J 297 BLACK-GREEN

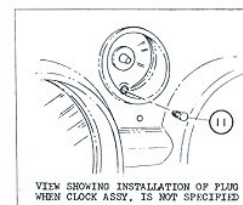

1967 MUSTANG INSTRUMENT PANEL