





67-68 Mustang Rear Mount Panel  
Installation Instructions and  
Packing List

Step 1. Remove standoffs on bezel were indicated (use wire cutters).

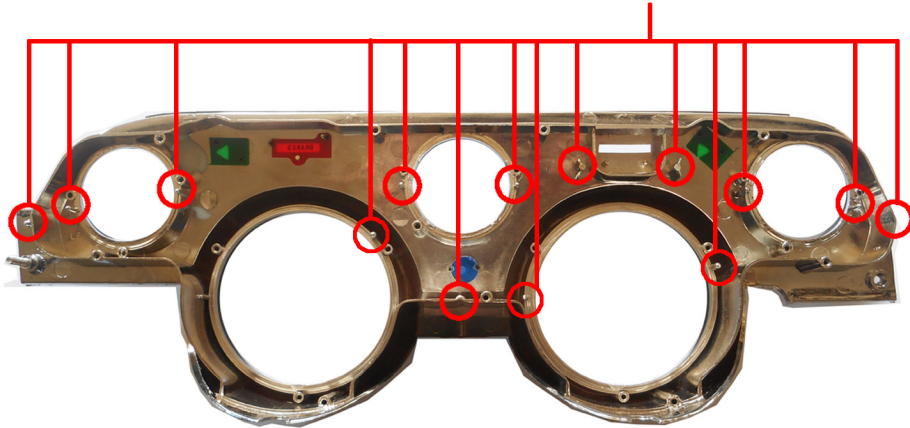

NOTE: Check carefully. Some bezels may or may not have standoffs in all indicated locations.

Step 2. Fasten ABS mounting panel (speedometer and tachometer already installed) to the back of the bezel using the nine self tapping screws provided (screw size #8 3/8).

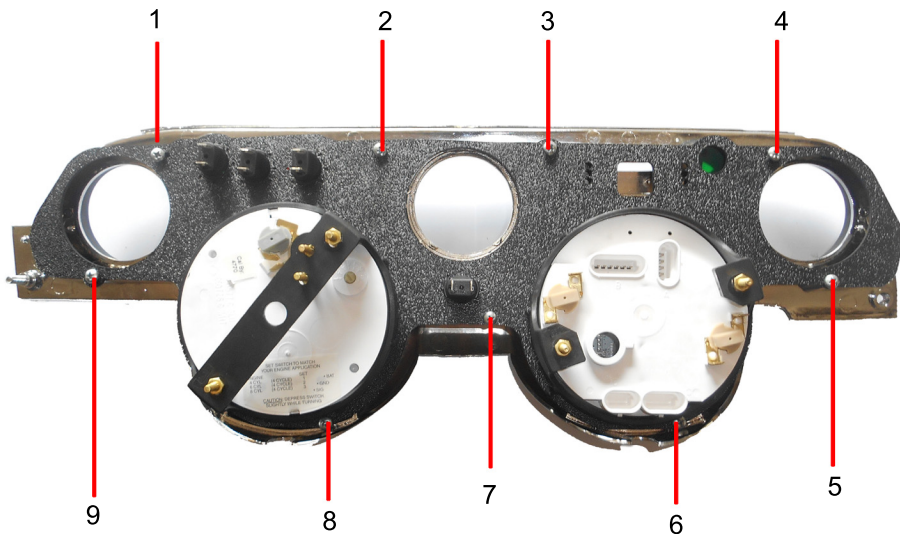

Step 3. Install 2-1/16" gauges through the front of the bezel. Secure gauge to back panel with the 2-1/16" backclamp washers and nuts provided.



Fully assembled



67-68 MUSTANG GAUGES/BRACKET KIT CONTENTS

- 1- 4-3/8" SPEEDOMETER W/ SPACERS AND BACKCLAMP
- 1-4-3/8" TACHOMETER W/ SPACERS AND BACKCLAMP
- 1- 2-2/16" FUEL GAUGE 73-10 AND BACKCLAMP
- 1- 2-2/16" WATER TEMPERATURE GAUGE AND BACKCLAMP
- 1- 2-2/16" OIL PRESSURE GAUGE AND BACKCLAMP
- 1- OIL PRESSURE SENDER
- 1- TEMPERATURE SENDER
- 1- BUSHING KIT
- 1- PROGRAMMING BUTTON
- 1- GAUGE HARDWARE (17EA 8-32 NUTS, 8 WASHERS, 8 LOCK WASHERS)
- 1- SPEEDOMETER HARNESS
- 1- TACHOMETER HARNESS (STEPPER GAUGE ONLY)
- 1 INSTRUCTION BOOKLET
- 1- INSTRUCTION SHEET (BRACKET)

BRACKET:

- 1 BRACKET
- 1-UPPER SUPPORT PIECE W/ ADHESIVE
- 9- #6X3/8" SELF TAPPING SCREWS
- 5- FLAT WASHERS
- 4- BULB ASSEMBLY