



Driven Beyond Perfection

LEFT HAND REMOTE MIRROR

INSTALLATION INSTRUCTIONS

APPLICATION: 1967-1968 Mustang

Thank you for purchasing another quality Scott Drake reproduction part. Please refer to the installation instructions below when installing this part.

TOOLS REQUIRED:

- Phillips screwdriver
- Needlenose pliers
- Drill with 3/4" bit

PREPARATION:

Remove the driver's door armrest pad, door handle, window crank, and door panel.

INSTALLATION INSTRUCTIONS:

Step 1: REPLACING EXISTING REMOTE MIRROR

Remove mirror control knob bezel from the door panel by turning the bezel counter-clockwise. Remove the mirror from door and pull the remote cable and controls out through the opening. Install the new mirror in reverse order. Check the function of the control knob before re-installing the door panel. Turn the control assembly accordingly so the controls adjust the direction of the mirror properly.

Step 2: NEW REMOTE MIRROR INSTALLATION

Position new mirror pad on driver's door near the vent window. Check location of mirror to not obstruct vent window from opening. Mark the location of the mounting screws, and the large hole, for the remote control assembly. (Figure 1)

Drill the large hole first using a 3/4" drill bit. Re-check the position of the mirror with the control assembly inside the door cavity. For the mounting screws, we recommend using our mounting kit C7AZ-17696-MK, with rubber rivet nuts and chrome screws. You may also use the tapping screws provided by drilling a small starting hole for each screw. Secure the mirror and pad to the door.

Position the control cables in front of the window channel. Check to make sure that the cables window operation. Note that the back of the door has a perforated hole for the remote control assembly. Carefully cut out the hole and install the control assembly with the retaining washer on the back of the door panel.



Figure 1: Make sure mirror clears vent window

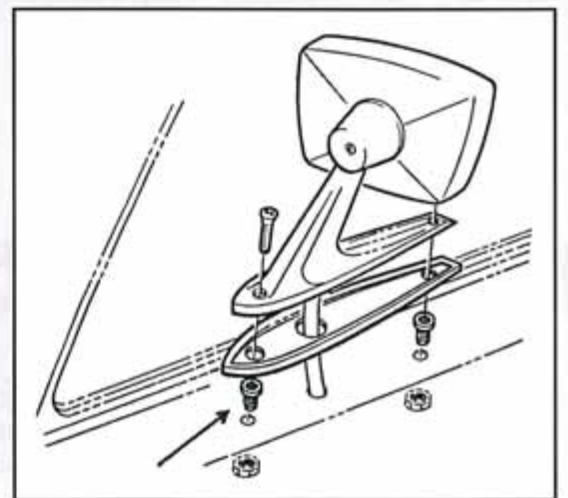


Figure 2: Diagram of installation assembly



Screw on the chrome bezel. Before securing the door panel, check the operation of the controls and mirror. Adjust the control assembly as required and tighten in place with the chrome bezel.

Note: A pair of needlenose pliers can be used to tighten the bezel. Use caution to avoid scratching the chrome.

Complete the installation by re-installing the door panel, handles, and arm rest pad.

Step 3: FINAL ADJUSTMENTS

If the mirror will not adjust to the proper angle after installation, the mirror head will need to be adjusted. To do this, carefully loosen the chrome screw at the back of the mirror head. Do not remove the screw, only loosen it. Move the entire head slightly on the pivot and tighten the screw. Check position. Repeat as required. **At no time should the mirror head be adjusted without first loosening the screw.** (Figure 3)



Figure 3: Adjusting the mirror head

SATISFACTION GUARANTEE:

If you are not happy with this product for any reason or found product to be defective in manufacturing, simply return it to Scott Drake Enterprises, Inc. within 30 days of purchase and we will replace it - no questions asked. We stand behind our products one hundred percent, so you can sit behind the wheel with pride.

** Please call Scott Drake Customer Service for a Return Authorization (RA) before returning any product. Proof of purchase and dated receipt must be present with any return. All returned products are tested and if found to be damaged by the installer, no replacement will be issued. You pay the cost to ship to us, we pay for the return shipping. Guarantee does not include any labor and/or tax charges incurred.*

To place an order, or for current pricing, call your authorized Scott Drake dealer.

For a list of dealers in your area, or for any other questions about Scott Drake products, visit www.scottdrake.com or call our customer service department toll free:

1.800.999.0289

Mon - Thurs 7:00 a.m. to 5:00 p.m.
Friday 7:00 a.m. to 4:30 p.m. - PST



130 Cassia Way
Henderson, NV 89014
t: 702.853.2060
f: 702.853.2062