
Solid Motor Mount, 4.6L, 1996-04 (MMSMM-2)

This kit includes:


- 1 Solid Motor Mount, 4.6L, Passenger Side
- 1 Solid Motor Mount, 4.6L, Driver Side
- 2 9/16 G8 Flat Washer
- 2 M14-2.0 Lock Nut



Read all instructions before beginning work. Following instructions in the proper sequence will ensure the best and easiest installation.

1. Remove the stock engine mounts per the instructions detailed in the Ford Manual.

NOTE: The mounts are Driver and Passenger side specific. Match the MM mounts to the OEM mounts being removed.

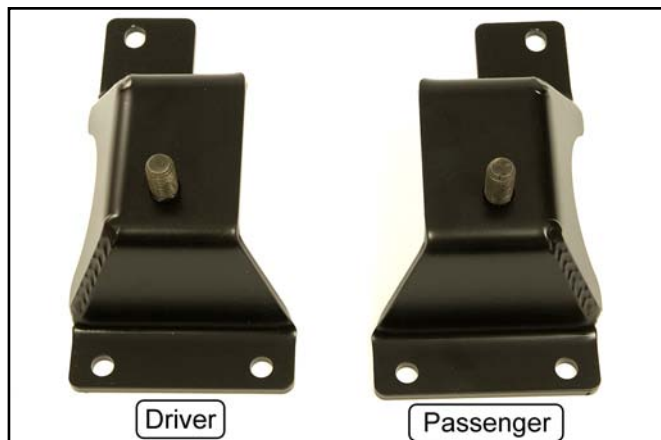

2. Install the MM Solid Motor Mounts.
3. Torque the fasteners to the following specifications:

Motor Mount to Engine Block: 52 ft-lb

Motor Mount to K-Member: 94 ft-lb