

NOTE:

This Drake Muscle Cars Shift Boot is designed to replace the factory shift boot on 2010-11 Mustang V6 and GT Base Models (without the aluminum shift knob used in premium packages).

INSTALLATION INSTRUCTIONS

for Carbon-Fiber-Look Shift Boot
AR3Z-7277-CF

No special tools required for installation.

1. Set emergency brake and block the wheels to prevent the car from rolling. Fig 1
2. Put gear shift lever in the neutral position.
3. Remove shifter knob by rotating counter clockwise to unthread.

NOTE: Some knobs do have loctite so they will come off hard.

4. Open the cup holder door and rear console lid. Clasp the rear part of the console and firmly pull the rear up to disengage the (5) retaining clips and then out towards the rear away from the dash to clear the front two locating pins. Fig 2
5. Remove the three electrical connections (black, green, and grey connectors) from the console by pressing on the tabs and pulling out. Fig 3 & 4
6. Release the grey connector from the console using a small flat head screwdriver to disengage the locking tab.
7. The console should now be free to be removed from vehicle.
8. Flip over on a soft surface and disengage the (9) retaining clips holding the factory shift boot in place.
9. Install the Drake shifter boot by placing into console and engaging the (9) clips. Follow the marking on the plastic boot bezel labeled "front" towards the front of the vehicle for proper orientation. Fig 5 & 6
10. Reconnect (3) electrical connectors, console lid, and shift knob.

Enjoy your new Shift Boot from Drake Muscle Cars, and be sure to visit DrakeMuscleCars.com for more great Mustang parts and accessories!

Drake Muscle Cars

130 Cassia Way, Henderson, NV 89014
Tel: (702) 853-2060 www.DrakeMuscleCars.com



Figure 1



Figure 2



Figure 3



Figure 4



Figure 5

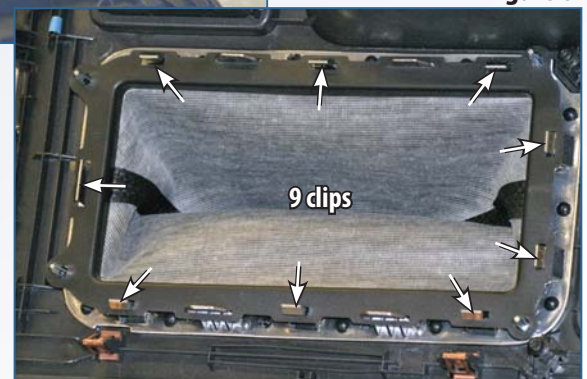


Figure 6