



Revised 2-27-08



Highly Styled, Low Cost Serpentine Drive

Installation Instructions

Ford 351 Cleveland

*Kit #30440 (with Power Steering)
and #30430 (without Power Steering)*



Included Parts List

Main Front Bracket PN 30431

- 1 - 30431-A.....Face Plate Body
- 2 - TP3-.990.....Tube Spacers
- 1 - TP3-1.330....Tube Spacers
- 1 - TP3-1.730....Tube Spacers
- 2 - MM-100Bolt Adjustment Sleeves
- 1 - S144 $\frac{5}{16}$ " - 18 x $\frac{7}{8}$ " SHCS
- 1 - S148 $\frac{5}{16}$ " - 18 x 1 $\frac{1}{4}$ " SHCS
- 1 - S150 $\frac{5}{16}$ " - 18 x 1 $\frac{1}{2}$ " SHCS
- 2 - S162 $\frac{5}{16}$ " - 18 x 3" SHCS
- 1 - S170 $\frac{5}{16}$ " - 18 x 4" SHCS
- 1 - S171 $\frac{5}{16}$ " - 18 x 4 $\frac{1}{4}$ " SHCS
- 2 - S244 $\frac{3}{8}$ " - 16 x $\frac{3}{4}$ " SHCS
- 3 - S254 $\frac{3}{8}$ " - 16 x 1 $\frac{3}{4}$ " SHCS
- 1 - S264 $\frac{3}{8}$ " - 16 x 2 $\frac{3}{4}$ " SHCS
- 1 - S272 $\frac{3}{8}$ " - 16 x 3 $\frac{3}{4}$ " SHCS
- 1 - S551M8 - 1.25 x 25mm SHCS
- 2 - S553M8 - 1.25 x 35mm SHCS
- 3 - S622 $\frac{3}{8}$ " - 16 Nylon Lock Nut
- 5 - S660 $\frac{5}{16}$ " SAE Flat Washer
- 2 - 740-A.....Idler Pulley Body
- 2 - 302-A.....Idler Pulley Cover
- 6 - S022 $\frac{8}{32}$ x $\frac{3}{8}$ " SHCS
- 2 - S666 $\frac{3}{8}$ x $\frac{3}{4}$ " O.D. Flat Washer

Alternator Rear Support PN 30432

- 1 - 30432-A.....Alt Rear Support Body
- 2 - S156 $\frac{5}{16}$ " - 18 x 2 $\frac{1}{4}$ " SHCS
- 1 - S450 $\frac{5}{8}$ " - 18 x 1 $\frac{1}{8}$ " Set Screw

A/C Rear Support PN 30433

- 1 - 30433-A.....A/C Rear Support Body
- 1 - TP3-.520.....Tube Spacer
- 2 - S155 $\frac{5}{16}$ " - 18 x 2" SHCS
- 1 - S216 $\frac{5}{16}$ " - 18 x 2" Hex Head Bolt

Belt Tensioner Tool PN30436

- 1 - MM101.....RH Aluminum Rod End
- 1 - MM102.....LH Aluminum Rod End
- 1 - MM106.....Threaded Rod Aluminum 14 $\frac{3}{4}$ " Long

Power Steering Bracket PN 30434 (for kit # 30440)

- 1 - 30434-A.....Front Power Steering Bracket Body
- 1 - 740-A.....Idler Pulley Body
- 1 - 302-A.....Idler Pulley Cover
- 1 - TP3-.400..... $\frac{3}{8}$ " ID .400" Aluminum Tube Spacer
- 3 - S022 $\frac{8}{32}$ x $\frac{3}{8}$ " SHCS
- 1 - S550M8 - 1.25 x 20mm SHCS
- 1 - S666 $\frac{3}{8}$ " x $\frac{3}{4}$ " O.D. Flat Washer

Pulleys Kits PN 2230-206

- 1 - 2231-A.....Crank Pulley Body
- 1 - 2232-A.....Water Pump Pulley Body
- 1 - 206-A.....Alt Pulley Body
- 1 - 306-A.....Alt Pulley Cap Body
- 1 - S716Adapter Ring
- 1 - 221.....Alt Fan
- 1 - 312-A.....Water Pump Pulley Cap Body
- 1 - 394-A.....A/C Pulley Cover Body
- 3 - S028 $\frac{8}{32}$ x 1" SHCS
- 1 - S685Lock Washer
- 3 - S124 $\frac{1}{4}$ " - 20 x $\frac{3}{4}$ " Button Hd Bolt
- 4 - S186 $\frac{5}{16}$ " - 24 x $\frac{7}{8}$ " SHCS
- 4 - S248 $\frac{3}{8}$ " - 16 x 1" SHCS

- 1 - 618-A.....Power Steering Pulley (for kit # 30420)

- 1 - 302-A.....Power Steering Pulley Cap (for kit # 30420)

- 3 - S022 $\frac{8}{32}$ x $\frac{3}{8}$ " SHCS (for kit # 30420)

Accessories

- 1 - P164Edelbrock Water Pump
- 1 - P411Sanden A/C Compressor
- 1 - P417A/C Line Kit
- 1 - P571Alternator Polished Alum
- 1 - P315Remote Power Steering Pump (for kit # 30420)

Required Tools and Materials

- RTV Silicone
- Loc-Tite® Thread Locker
- Gasket Scraper, Steel Wool or Sandpaper to clean gasket surfaces
- $\frac{3}{16}$ " Allen Head Driver
- $\frac{5}{16}$ " Allen Head Driver
- $\frac{1}{4}$ " Allen Head Driver
- 6mm Allen Head Driver
- $\frac{5}{8}$ " Combo Wrench
- $\frac{9}{16}$ " Combo Wrench
- $1\frac{1}{16}$ " Combo Wrench

- $\frac{3}{4}$ " Combo Wrench
- Socket Wrench & Extension
- 10mm 12pt. socket
- 12mm 12pt. socket

Serpentine Belt

- Dayco Belt (5060780) 78" 6 Rib Belt, for Kits With Power Steering
- Dayco Belt (5060655) 65 $\frac{1}{2}$ " 6 Rib Belt, for Kits With Power Steering



Tech Support 1-888-729-9070

Preparing to Install

- Disconnect the battery to prevent accidental engagement of starter motor.
- Drain coolant from system
- If your A/C is intact and charged it must be evacuated. This is best done by a professional garage with proper recycling equipment
- Remove the existing alternator, air conditioning compressor and associated brackets.
- Remove all pulleys and water pump.
- Remove all traces of old gasket and sealer with gasket scraper and steel wool pad.
- Clean threads in block by chasing with appropriate thread chasers.

Installing the Kit

FIG. 1. Ensure the sealing face of the coolant outlets are clean, flat and free of old gasket material. Assemble Water Pump to Timing Cover along with proper gaskets and a thin coat of RTV silicone sealant. Water Pump (P164)

See diagram for water pump mounting.

Mount the water pump using the SHCS bolts shown in locations A thru D

(NOTE: The 4 locations also each get a $\frac{5}{16}$ " washer (S660).

[A] $\frac{5}{16}$ X $\frac{7}{8}$ " (S144) [B] $\frac{5}{16}$ X $1\frac{1}{2}$ " (S150)
 [C] $\frac{5}{16}$ X 3" (S162) [D] $\frac{5}{16}$ X $1\frac{1}{4}$ " (S148)

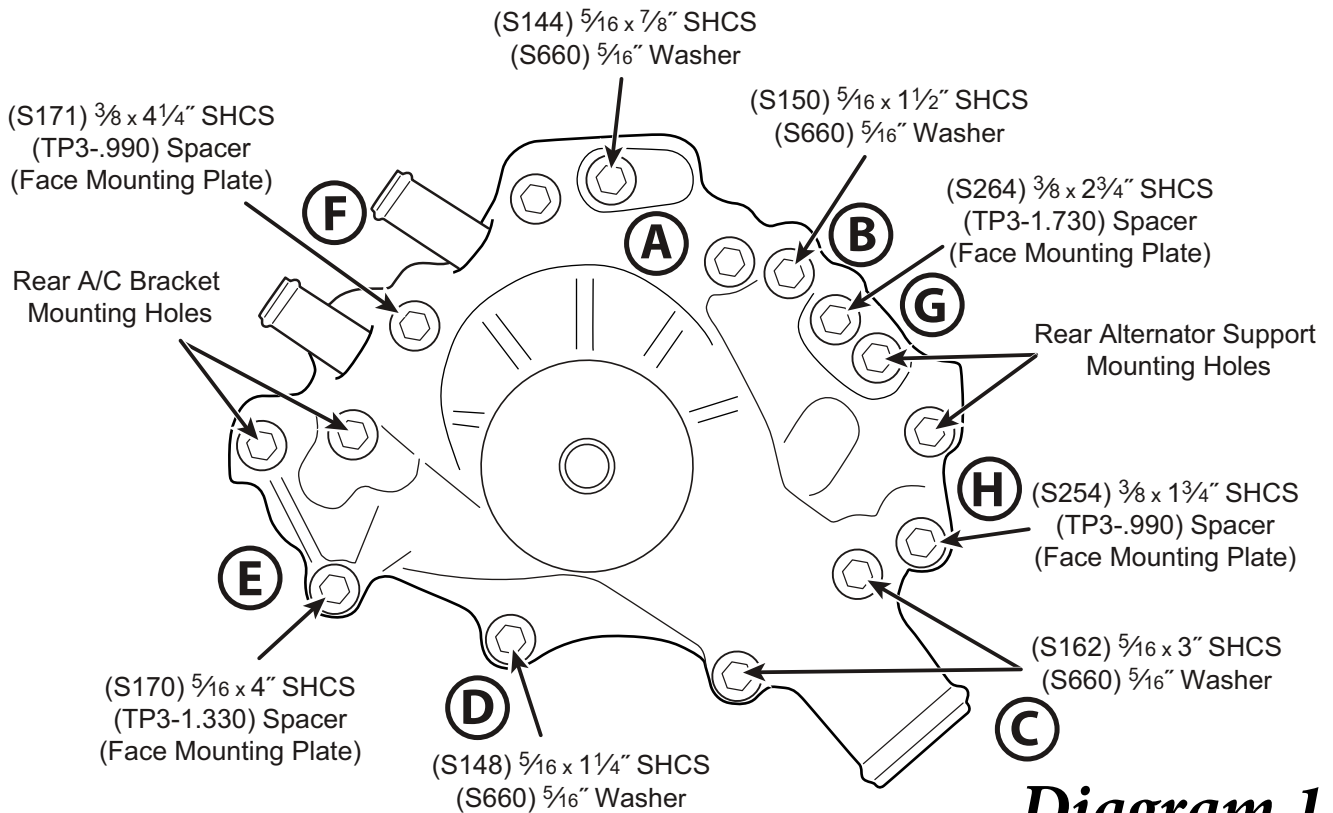
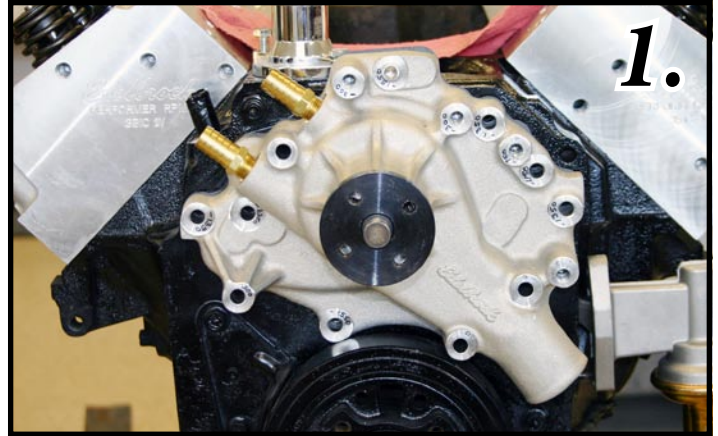


Diagram 1.

Fig 2: Install the Alternator Rear Support Bracket (30432-A) to the water pump. Using (2) $\frac{5}{16}$ x $2\frac{1}{4}$ " SHCS (S156) as shown. Then install the A/C rear support bracket (30433-A) to the water pump using (2) $\frac{5}{16}$ x 2" (S155) SHCS, apply Loc-Tite to the threads.

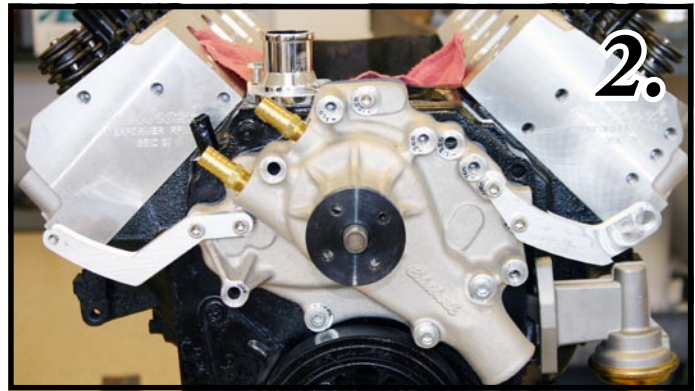


Fig 3: Install Main Face Plate (30431-A). See diagram and install the Main Face Plate using the following bolt sizes and spacer locations.

Position [E]

$\frac{5}{16}$ x 4" (S170) SHCS & TP3-1.330 Spacer

Position [F]

$\frac{5}{16}$ x $4\frac{1}{4}$ " (S171) SHCS & TP3-.990 Spacer

Position [G]

$\frac{3}{8}$ x $2\frac{3}{4}$ " (S264) SHCS & TP3-1.730 Spacer

Position [H]

$\frac{3}{8}$ x $1\frac{3}{4}$ " (S254) SHCS & TP3-.990 Spacer

Apply Loc-Tite to the threads.

See Diagram 1. on previous page for proper water pump mounting locations.

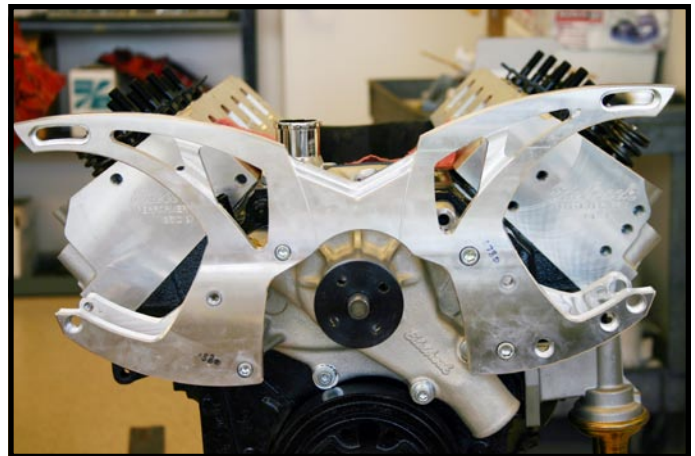
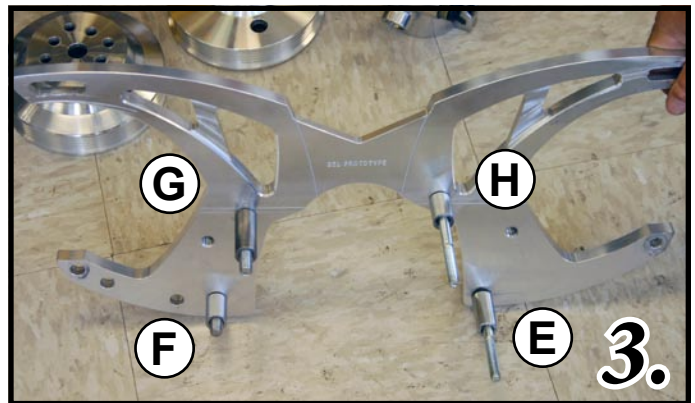


Fig 4: Install Power Steering Pump (P315) to the Power Steering Bracket (30434-A) with (3) M8x20mm SHCS (S550)..

Mount the Power Steering Bracket (30434-A) to the main Front Bracket (30431-A) with (2) $\frac{3}{8}$ x $\frac{3}{4}$ " SHCS (S244). (For KIT 30440), apply Loc-Tite to the threads

NOTE: If building a non-Power Steering Kit, install the (2) $\frac{3}{8}$ x $\frac{3}{4}$ " SHCS (S244) and use (2) $\frac{3}{8}$ " Locknuts (S622) to fill the counter bored holes.

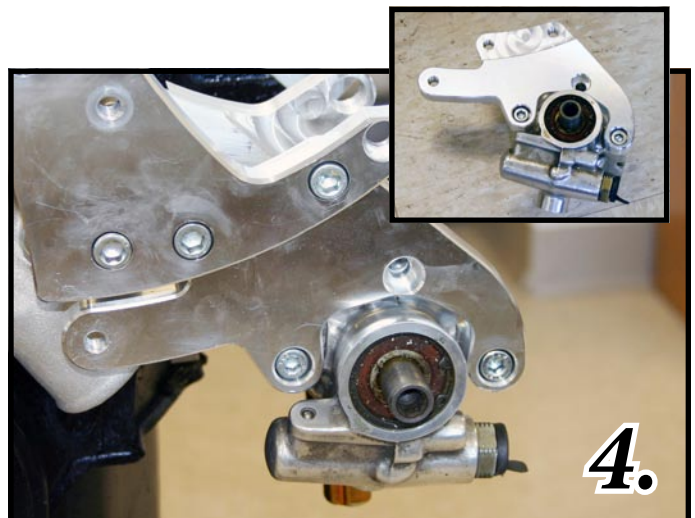


Fig 5: Install the $\frac{5}{8}$ x $1\frac{1}{8}$ " Set Screw (S450) in the Alternator Rear Support Bracket, this will take up any play in the alternator. Install the Alternator (P571) with a $\frac{3}{8}$ x $3\frac{3}{4}$ " SHCS (S272) and lock into place with a $\frac{3}{8}$ " lock nut (S622).

In the upper tapped hole of the Alternator, use the (MM-100) Adjustment Bushing and an M8x35mm SHCS (S553) and bolt thru the front upper slot. leave loose at this time.

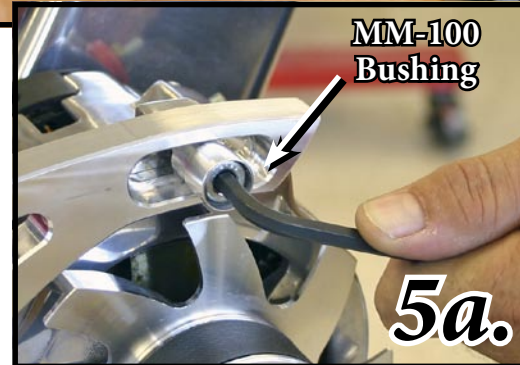


Fig 6: Install, the A/C Unit (P411) using the $\frac{5}{16}$ x 2" Hex bolt (S216) thru the rear lower ear of the A/C compressor unit and the TP3-.520 Spacer between the rear ear and the rear support bracket as shown. Use the M8x25mm (S551) thru the front hole of the main plate to secure the front mounting flange of the compressor. Use the (MM-100) and the M8x35mm (S553) in the upper slot as with the alternator mount.

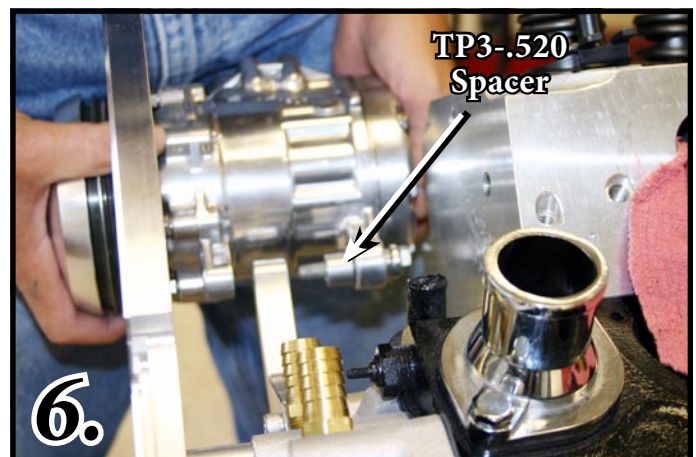


Fig 7: Install the two main face plate bracket Idlers (740-A) with (2) $\frac{3}{8}$ x $1\frac{1}{4}$ " SHCS (S254). Also use (2) $\frac{3}{8}$ " flat washers (S666) and install into the two $\frac{3}{8}$ " tapped holes in main plate.

To install the Idler onto the Power Steering bracket, use a $\frac{3}{8}$ x 2" SHCS (S256) and a $\frac{3}{8}$ " flat washer (S666). In between the Power Steering Bracket and the Idler use a TP3-.400 Spacer as shown. Next install the (3) provided Idler Caps (302-A) using on each (3) $\frac{5}{32}$ x $\frac{3}{8}$ " SHCS (S022), apply Loc-Tite to the threads

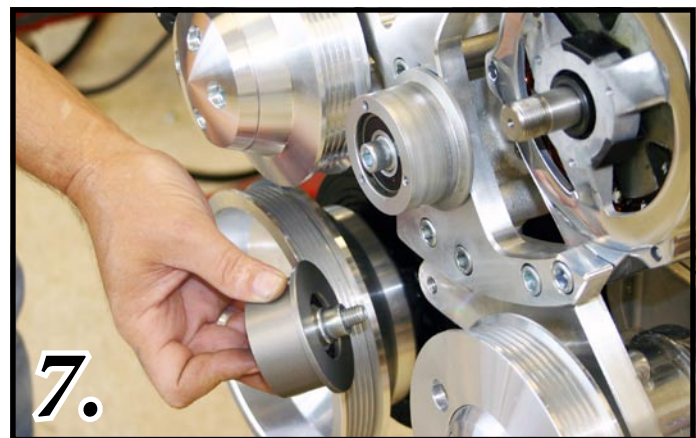


Fig 8: Install the Power Steering Pulley (618-A) using a proper install tool for press fit remote style pumps. Press pulley on till it is flush with the shaft.

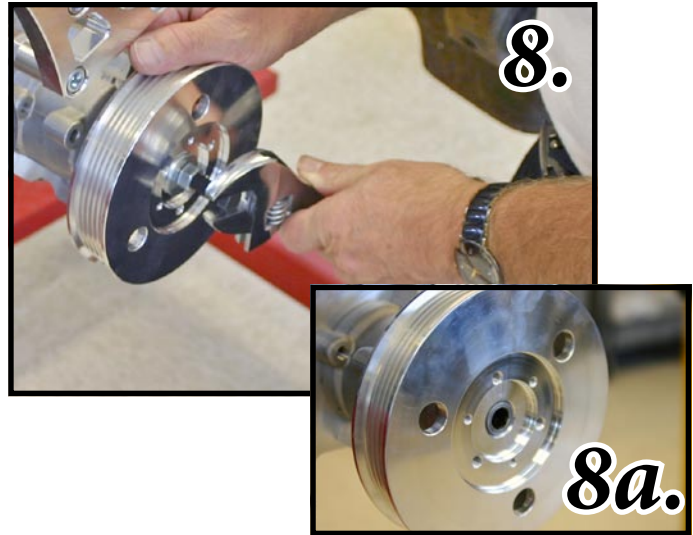


Fig 9: Use Adapter ring $\frac{3}{4}$ " O.D. x $\frac{5}{8}$ " I.D. (S716) over the water pump shaft and Install water pump pulley (2232-A) and water pump cap (312-A) with (4) $\frac{5}{16}$ -24 x $\frac{7}{8}$ " SHCS (S186)

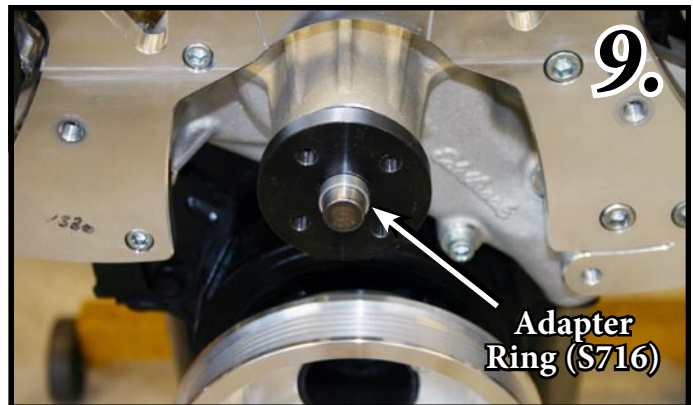


Fig 10: Install Crank Pulley (2231-A) with (4) $\frac{3}{8}$ x 1" SHCS (S248).




Fig 11: Install Alternator Fan (221-A) and Alt Pulley (206-A). Slide the fan over the shaft followed by Alt Pulley and Lock Washer (S685). Use an impact gun to torque the alternator lock nut. Now install the Alt cover (306-A) with (3) $\frac{3}{32}$ x 1" SHCS (S028).



Fig 12: Install Dayco Belt (5060780) 78"




Fig 13: Slip the supplied (30436) March Adjustment Tool over the two (MM100) bushings at the Alternator and A/C sides. Use a wrench to turn the adjustment tool outward to tighten the serpentine belt to 100 ft. lbs. Use the holes in the adjustment tool to tighten both M8 socket head cap screws when correct belt tension has been achieved. Remove the adjustment tool and keep for future use.

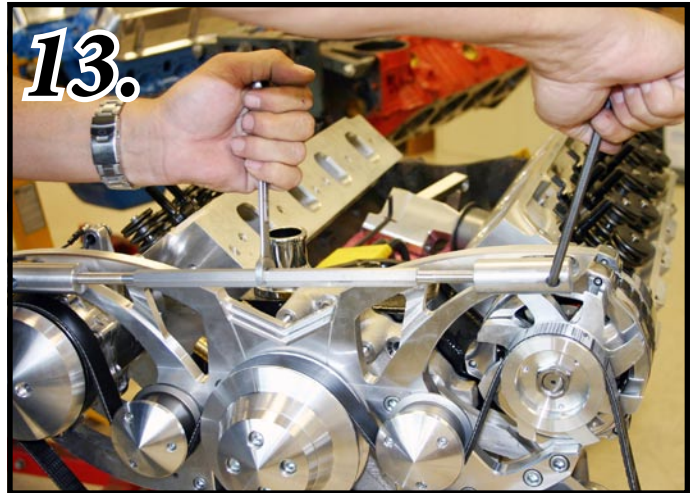

TIP: Fig-13a: Your Serpentine belt is tight when it can't be moved by more than 1/2 inch at its longest span between pulleys. The belt should not be able to be twisted by more than half a turn.

Check and tighten all bracket bolts, alternator, and A/C lower mounting bolts, turn engine over once by hand to check for any belt rubbing and proper belt alignment. Run engine three minutes and check belt tension again.

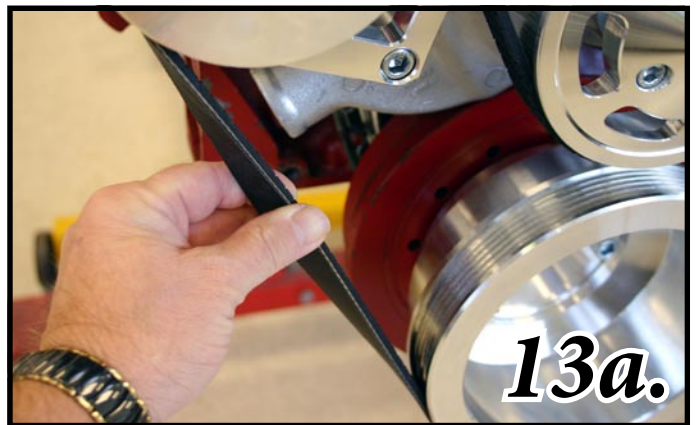

Final Assembly

If you are going to be installing your air conditioning hoses and charging the system at this time, remove the cover plate on top of the compressor body. Install the (P417) A/C adapter lines, hoses and connect clutch wire and charge system.

Important: If you are NOT installing hoses and charging the system at this time, leave cover plate on compressor. Do not connect the clutch wire or apply power to clutch wire without the hoses connected and the system charged – *Serious damage will occur to compressor.*

MARCH PERFORMANCE, INC. • 16160 PERFORMANCE WAY • NAPLES, FLORIDA 34110
LIMITED WARRANTY

March Performance warrants to the original retail purchaser that for a period of ninety (90) days from the date of purchase, March Performance will repair or replace, at their option, any Product, which is found to be defective in material or workmanship.

Exclusions from Warranty Coverage

March Performance does not warrant any Product that is damaged from abuse, misuse or misapplication or not used for its intended purposes.

This Limited Warranty does not cover or apply to any damage or loss sustained to the engine or any other parts which may have been caused by the defective Product and does not cover or apply to any personal injury, labor charges or any other incidental costs for damages caused by the defective Product. THIS IS THE ONLY EXPRESS WARRANTY GIVEN WITH RESPECT TO YOUR PRODUCT. ALL OTHER EXPRESS WARRANTIES, GUARANTEES, OR STATEMENTS REGARDING THE PRODUCT, WHETHER WRITTEN OR VERBAL, ARE HEREBY DEEMED NULL AND VOID AND OF NO EFFECT.

Normal wear and tear and damage to the Product not caused by March Performance are also excluded from this Warranty.

DISCLAIMER OF OTHER WARRANTIES

EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY WHETHER OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR WARRANTY, SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY WILL LAST SO THAT THE PRECEDING LIMITATION MAY NOT APPLY TO YOU.

Limitation on Remedies

REPAIR OR REPLACEMENT AS PROVIDED IN THIS WARRANTY IS YOUR EXCLUSIVE REMEDY. MARCH PERFORMANCE SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGE FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THE PRODUCT. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OF CONSEQUENTIAL DAMAGES SO THE PROCEEDING LIMITATIO OR EXCLUSIONS MAY NOT APPLY TO YOU. YOU HAVE NO RECOURSE OR REMEDY FOR DAMAGE OR DEFECT CAUSED BY MISUSE, ABUSE OR NEGLIGENCE.

THIS WARRANTY GIVES YOU SPECIFIC RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH MAY VARY FROM STATE TO STATE.

Your Responsibilities:

1. Use and install the Product only for its intended purpose.
2. To avail yourself of this Limited Warranty, return the Product with a copy of the paid receipt, postage paid to:
MARCH PERFORMANCE
16160 PERFORMANCE WAY
NAPLES, FL 34110
3. When returning the Product, you must follow the directions set forth on the Warranty/Return Form on the reverse side of this Limited Warranty. If you no longer have the Warranty/Return Form, one may be obtained by contacting March Performance during normal business hours at: (888) 729-9070.
4. Shipping and/or transportation costs returning the Product to March Performance and any damage caused during shipping are your responsibility. March Performance will pay for shipping and/or transportation costs incurred in returning the Product to you.

LIMITED WARRANTY WARRANTY/RETURNS FORM

No product mounted is considered for credit unless it is a manufacturer defect.

All products returned for any reason must reference an authorization number (RGA). The RGA number is obtained by calling place of purchase during normal business hours. **Any product returned without the RGA# written on the return package next to the return shipping label will be refused.**

All returns must ship via UPS and be properly packaged in the original carton. Return freight charges are the responsibility of the customer unless the product was shipped in error.

March product returned after (1) year from date of purchase will not be accepted unless it is found to be a manufacturer defect. **The customer must include a written statement describing the alleged product defect.** The complete Limited Warranty is set forth on the reverse side.

100% credit issued on manufacturer defects

20% return fee on all reshelvable product

70% return fee on all repairable product

NO CREDIT WILL BE ISSUED ON RETURNED PRODUCT BEYOND REPAIR

March Performance thoroughly inspects all returns. It is the sole discretion of March Performance in determining the condition of all returned merchandise. To receive replacements at no charge the original product must first be received and inspected by March Performance for determination. Immediate replacements may be purchased and later credited upon inspection determination.

Please Complete the Information below, detach and include with returned product.

RGA# _____ CT# _____ Issued by: _____ Date _____

Purchaser's Name _____ Phone _____

Address _____

Purchased Directly Through _____ Invoice# _____

Product ID _____ Invoice Date _____

Reason _____

**** MOUNTED PRODUCTS ARE NONREFUNDABLE ****