

## INSTALLATION INSTRUCTIONS - INS068

# COLD-AIR INDUCTION SYSTEMS

Part#s 1712, 17125 - Fits 1994-95 Ford Mustang GT 5.0L  
Part#s 1717 - Fits 1994-1998 Ford Mustang V6 3.8L  
Part#s 1718, 17185 - Fits 1996-2004 Ford Mustang GT 4.6L  
Part#s 1719, 17195 - Fits 1999-2003 Ford Mustang V6 3.8L + 2004 Ford Mustang V6 3.8L & 3.9L Applications - The C.A.R.B. exemption sticker, D-245-14 must be visible under the hood so that an emissions inspector can see it when vehicle is tested for emissions.



SPECIAL TOOLS REQUIRED: None



INSTALL TIME: Approximately 1 hour.



DIFFICULTY: Easy



MADE IN U.S.A.

IMPORTANT: All appropriate safety equipment and gear must be used during the installation of this or any BBK Performance products or any time you work on a vehicle. BBK Performance Inc. accepts no responsibility for injuries or damage caused by or during the installation of this product.

UPDATED LAST: January 2019



FOLLOW THESE INSTRUCTIONS CAREFULLY TO ENSURE CORRECT FITMENT AND OPERATION

### STEP 1

Remove the entire stock air inlet system from the vehicle by simply unclamping at the throttle body and removing the bolt attaching the air box to the inner fender-well area. Disconnect all hoses, wiring, etc., and then tug upwards firmly on the air-box to disengage from the rubber grommet in the frame rail.

*Note: Rubber grommets will sometimes stay attached to the bottom of the stock air box, be sure to remove them and reinstall into the frame rail.*


### STEP 2

Remove the mass-air sensor from the air filter box and attach to the new filter mount using the supplied bolt and nuts (4) with the electrical plug portion at the top.

*Note: On most models the air box will need to be disassembled in order to allow access to mass-air flow sensor. The air box will come apart approximately 3 inch down from where the throttle body inlet hose attaches to the air box.*

### STEP 3

Attach the 2 supplied grommet studs to the fender filter mount with supplied hardware; the studs must be facing downward to slip into the rubber grommets in the frame rail. (See Diagram)

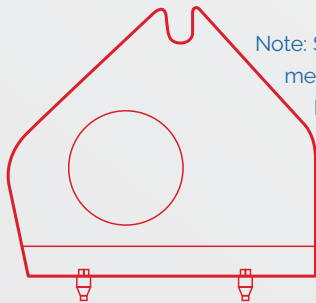

*Note: Some models come with a large rubber grommet and separate 3-1/2" diameter tube assembly. If so install the large grommet into the corresponding hole in the fender-well bracket, lightly oil the grommet inside diameter and carefully slide the 3-1/2" tube through the grommet.*

### STEP 4

Install the assembled filter-mount into the vehicle by pressing the aluminum studs firmly into the grommets on the frame rail then attach at the grommet on the inner fender-well using stock hardware.

### STEP 5

Slide the appropriate sized tube coupler over the mass-air sensor and attach with the supplied hose clamp.

### STEP 6

Slide the other tube coupler over the throttle body end of the inlet tube with supplied clamps and install between the throttle body and mass-air sensor, align the tube while tightening hose clamps.

On some models, the coupler attached to the mass-air sensor will be larger than the inlet tube, this coupler is designed to clamp down more than usual and will provide a smooth transition from the mass-air to the inlet tube.

### STEP 7

Attach all tubes, wiring, etc., to the new inlet tube (some models will have hose supplied to adapt the OEM hoses).

### STEP 8

Install filter from under the fender and clamp tightly into position.

*Note: Filter will not fit through the opening in the engine compartment, therefore it must be installed from underneath the fender.*

**MADE IN U.S.A.**

**IMPORTANT:** All appropriate safety equipment and gear must be used during the installation of this or any BBK Performance products or any time you work on a vehicle. BBK Performance Inc. accepts no responsibility for injuries or damage caused by or during the installation of this product.

UPDATED LAST: January 2020

