



97- 06 TJ REAR ADJ FORGED TRACK BAR

Thank you for choosing Rough Country for your Jeep off road needs.

Please read all the instructions before beginning the installation.

PRODUCT USE INFORMATION

We will be happy to answer any questions regarding our products by calling us @ 800-222-7023. Rough Country will not be responsible for any product that is altered. **This kit is for use with vehicles lifted 0 -6" of lift.**

KIT CONTENTS

1-ADJ FORGED TRACK ROD



TOOLS NEEDED

**T55 Torx Bit
15mm Wrench
18mm Socket
5/8" Wrench
11/16" wrench**

INSTALLATION INSTRUCTIONS

1. Remove the stock track rod from the axle using T55 Torx bit and using a 15mm & 18mm socket / wrench on the frame mount . Retain the stock hardware for reuse.
2. Install the adjustable forged track rod in the frame and axle mount with the factory hardware. Hand tighten at this time. **See Photo 1.**
3. Lower the jeep to the ground and measure the rear axle to see if the body is centered. If not turn the adjustment until the axle is centered. Tighten the clamps with a 11/16+and 5/8+wrench. **See Photo 2.**
4. Tighten the factory hardware using a T55 bit on the axle and a 15mm & 18mm on the frame.



PHOTO 1

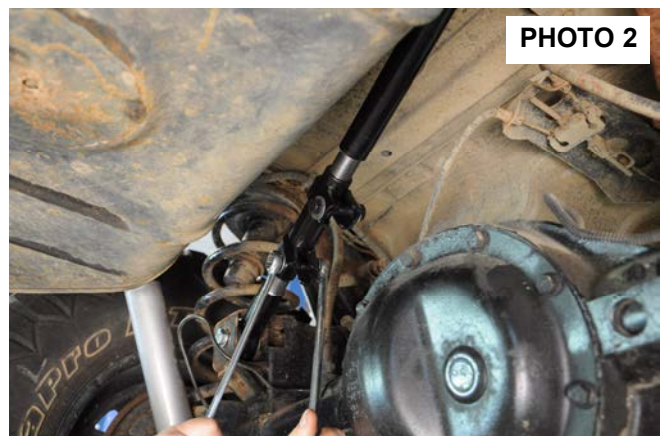


PHOTO 2

POST INSTALLATION

1. Check all fasteners for proper torque. Check to ensure there is adequate clearance between all rotating, mobile, fixed and heated members. Check steering for interference and proper working order.
2. Re torque all fasteners after 500 miles. Visually inspect components and re torque fasteners during routine vehicle service.
3. The rod end jam nut must be tightened and periodically checked to ensure rod end remains tight.

Thank you for choosing Rough Country for your Jeep off road needs.