

2005-08 MUSTANG 'GT500' LEMANS STRIPES

Dear Customer, this sheet is additional instructions and helpful information for kit # K220-S9 Lemans Stripes. Please read all instructions on the application instruction sheet also supplied with this kit.

Identify all stripe sections - read ALL instructions before proceeding.

HOOD SECTION



◀ HOOD
NOTE:
STRIPES MUST
BE SEPERATED.
INSTALL ONE
SIDE AT A TIME.



◀ Starting with the hood Stripes have a 1.25" center space. Remove washer jets from hood. After wax and silicone removal is complete install spacer pieces with the flat side exactly on the center line of the hood. Install 4 or 5 spacing them on the hood.

▶ Squeegee the spacers into place, remove top application tape and then remove the flat side of spacer only. The flat side is the side you applied to the center line of the hood.



◀ With only the angled side of the spacers left install the center spacer guide making sure it is straight. After you are sure your center spacer is straight remove the remaining spacer sections as shown in small photo.

STRIPES KIT: K220-S9



◀ Trim out hood stripe close on center side because this will butt up to the center guide. You can also cut out vent hole section if so desired, but it is not necessary. After the hood installation was complete we came to the conclusion that it is better to cut out the vent sections for more flexibility.

▶ With decal face down and backing liner facing upwards peel off the backing liner and apply a generous amount of application fluid.





◀ Start with the drivers side. Make sure to place the stripe so the vent hole cutout is aligned and the stripe is butt up against the center spacer tape.

▶ Squeegee the lower nose section first but don't waste time with the nose. Notice the stripe is not straight—that's OK. Make sure to keep wetting the stripe on the upper hood so it does not stick.



◀ Notice the wrinkles at the installers left hand before the vent hole. This is normal but make sure you have plenty of wetting solution under there.

▶ Start forming the stripe with your hands around the vent keeping the center of the stripe on the center spacer guide. This is hard and time consuming—don't go to fast.



◀ Keep wetting the stripe on the upper hood so it does not stick.

▶ Notice the stripe has formed around the vent pretty well and the installer is moving up the hood. You can wet the top tape after the stripe has formed to relieve some stiffness and this will also help the stripe flatten.



▶ Continue up the hood making sure the stripe follows the center spacing guide.



◀ Remove the top application tape slowly making sure the stripe does not lift. If you have small wrinkles or bubbles let the heating and cooling of the sun take care of it.

This is a tough installation and our guys needed more than one attempt before being successful. Replacement stripes are available if needed.

▶ Use a wet finger to form inside the vents and remember to remove all the fluid under the stripe to prevent bubbles from forming.



ROOF SECTION



◀ ARROW SHOWS FORWARD DIRECTION

◀ ROOF

NOTE:
STRIPES MUST BE SEPERATED.
INSTALL ONE SIDE AT A TIME.

▶
Install the roof stripes in the same manor.

First install the spacers at the forward and rear sections of the roof near the glass.

Use a 6" long piece of center guide tape to make the center space guide. Install your stripes one side of the roof at a time.



Make sure the stripes ends inside the grove at the front and back of the roof equality.

REAR SECTION



◀ BRAKE LIGHT

◀ TAIL PANEL

◀ TOP BUMPER

◀ TAG PANEL

▶
The tail panel stripe must be installed first.

This placement is critical to align the other stripes.

Cut the application tape from the medallion section so the decal will fit around the center medallion.



▶
The stripes will fit behind the medallion giving a complete look without a space.

The top of the stripe should meet the outer upper corners under the lip equally on both sides.

This will insure the stripe is centered properly and allow the other stripes in this section to match correctly.



◀ *Install the 1.25" center space guide tape as shown keeping in mind it's a good idea to check your measurements and be precise.*

Do all sections from below the tag panel to the trunk lid.


▶
Install the rear in the following order.

#3 Top Bumper section will overlap the Tag Panel section.

#4 Brake Light section will overlap the Tail Panel section.



TRUNK / WING SECTION

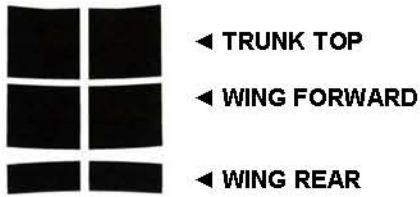

Moving to the trunk and wing section.



With your center guide tape in place:

#1 Install the trunk stripe.


#2 Install the rear wing section.

#3 Install the wing top stripe.

The wing top stripe will overlap the wing rear stripe.




FRONT BUMPER SECTION

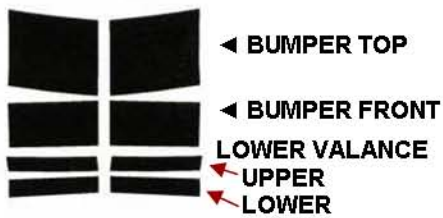


Use the spacer pieces to locate center and apply center stripe guide same as the previous sections you have done.

Note the installation sequence for this section and also note these stripes will also overlap.

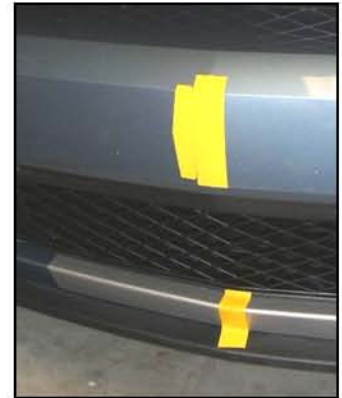

#3
Lower Section.
 INSTALL LOWER STRIPE FIRST
 THEN OVERLAP UPPER STRIPE

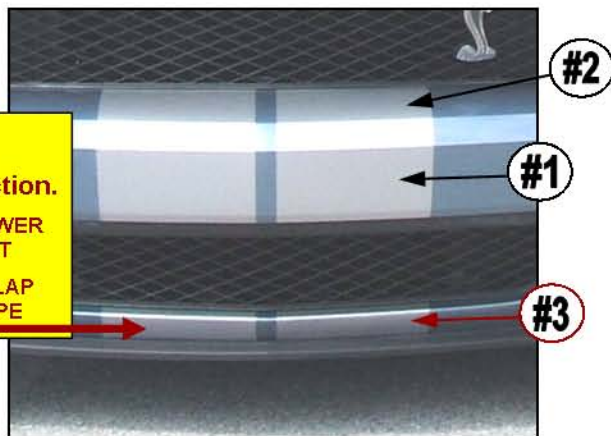

Now that all pieces are installed look over your work and make sure all is well.

Remember Graphic Express has replacement pieces available for sale.