


INSTRUCTION SUPPLEMENT

READ BEFORE ASSEMBLING WHEEL

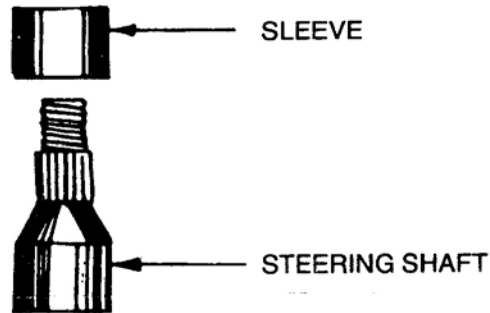

AFTER THE EXISTING STEERING WHEEL AND ASSOCIATED HARDWARE HAVE BEEN REMOVED AS INDICATED IN YOUR INSTRUCTION SHEET PLACE SLEEVE OVER STEERING SHAFT AS SHOWN ABOVE.

IMPORTANT NOTE

SLEEVE SHOULD FIT **FREELY** OVER SHAFT AND SLIDE DOWN UNTIL IT BOTTOMS.

ON SOME MODELS THE PLASTIC TURN SIGNAL CANCELING MECHANISM PREVENTS THIS SLEEVE FROM BOTTOMING OR FITS SNUGLY AGAINST THE SIDES OF SLEEVE. IF EITHER OF THESE CONDITIONS EXIST, **DO NOT USE SLEEVE**, IT IS NOT REQUIRED.

CONTINUE WITH INSTRUCTIONS FOUND WITH KIT AND WHEEL.

97521-00-01