


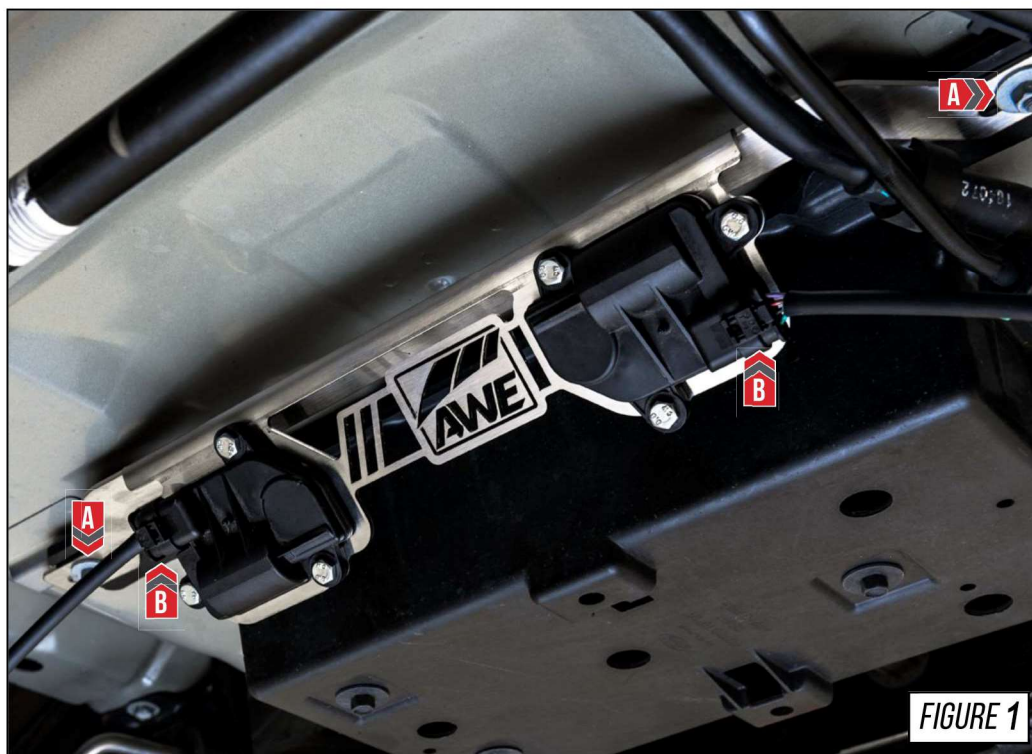

Locate the two (2) nuts on the bottom of the spare tire well, underneath of the vehicle, shown by **Arrow A** in **Figure 1**.

Using the included hardware, secure the factory valve motors to the appropriate locations on the bracket and install on vehicle, as shown in **Figure 1**.

Reinstall the factory valve control harness into each motor, as shown by **Arrow B** in **Figure 1**.



ENJOY!

